 


# WARING PRO<sup>®</sup>

## PROFESSIONAL SNOW CONE MAKER

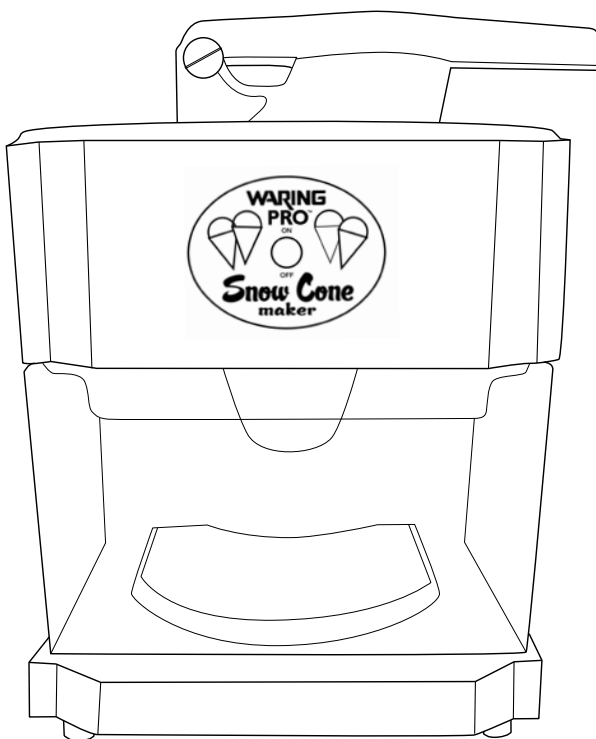

**WSCM200MRPC**

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use, before assembling or disassembling, and before cleaning.**
3. To protect against risk of electrical hazards, do not immerse the Waring Pro™ Professional Snow Cone Maker in water or other liquids.
4. Avoid contact with moving parts. Never place fingers or other utensils into ice chute.
5. Do not operate the Waring Pro™ Professional Snow Cone Maker or any electrical equipment with a damaged cord or plug, or after the unit malfunctions or is dropped or damaged in any manner. Return it to the nearest authorized service facility for examination, repair or adjustment.
6. When the Waring Pro™ Professional Snow Cone Maker is used by or near children, close supervision is necessary.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas burner or in or near fire.
10. Check ice chute for presence of foreign objects before using and only when appliance is unplugged.
11. Use only attachments that are included in the packaging of the Waring Pro™ Professional Snow Cone Maker. The use of other attachments may cause fire, electric shock or injury.
12. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
13. Do not use the appliance for other than intended use.
14. Do not allow children access to the plastic packaging bags.
15. Do not place the unit in a dishwasher.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

## CONTENTS

|                               |     |
|-------------------------------|-----|
| Important Safeguards .....    | 2   |
| Power Cord Instructions.....  | 3   |
| Before First Use.....         | 3   |
| Operation .....               | 3-4 |
| Helpful Hints.....            | 4-5 |
| Parts .....                   | 4   |
| Safety Features .....         | 5   |
| Cleaning and Maintenance..... | 5   |
| Recipes .....                 | 6-7 |

## POWER CORD INSTRUCTIONS

The Waring Pro™ Professional Snow Cone Maker has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

This appliance is for 120 volts only and should not be used with a converter.

## BEFORE FIRST USE

1. Carefully unpack your Waring Pro™ Professional Snow Cone Maker. Remove plastic from all parts on the unit. Be sure that the unit has not been damaged during transport. **Do not leave plastic bags around children.**
2. Rinse the snow bin with water and a non-abrasive cleaner, and then dry thoroughly.

## OPERATION

1. Place unit on a flat, sturdy surface where it will not be knocked over.
2. Check ice chute for presence of foreign objects before plugging in.
3. Insert the removable snow bin onto the main housing. An interlock safety feature will prevent the unit from turning on if not properly in place.
4. Be sure that the toggle switch is set to the Off position and


plug into an outlet.

5. To begin shaving ice, drop approximately 8-12 ice cubes (depending on size and shape) into the ice chute. Do not overfill or an interlock safety feature will prevent the shaving mechanism from turning on. **DO NOT ATTEMPT TO PUSH ICE CUBES INTO BLADE USING HANDS OR OTHER INSTRUMENTS.**
6. Flip the toggle switch to the On position and firmly push the ice press down to start the ice shaving mechanism.  
  
NOTE: if a large ice cube should become lodged in the unit, so that the blades cannot reach it, flip the toggle switch to the Off position and unplug from outlet. Empty freshly shaved snow from the snow bin, place snow bin back on the main housing, then pour warm water down the ice chute until lodged ice cube is melted or falls free. Empty the water from the snow bin, and dry thoroughly before placing back on the main housing. Resume feeding ice cubes through the ice chute.
7. When all the ice has been shaved, turn the unit to the Off position and unplug.
8. Remove the snow bin from the main housing and use the ice scooper to shape your snow cones.
9. Add ingredients specified in the recipe section or as desired.


## HELPFUL HINTS

- When shaving multiple batches of ice cubes, it is important to flatten the snow in the snow bin. You will notice a mound of snow is formed directly under the ice crushing mechanism, and if not flattened this could stop the shaving mechanism from operating properly. To flatten, simply remove the snow bin and either empty freshly shaved snow into another container or flatten within the snow bin using the ice scooper.
- It is important to shave ice cubes fresh from the freezer. Partially melted ice cubes could keep the shaving mechanism from operating properly. If an ice cube should become lodged because of this, please see the NOTE above to release.
- If needed, additional paper cones are sold by online kitchen and paper suppliers.

## PARTS

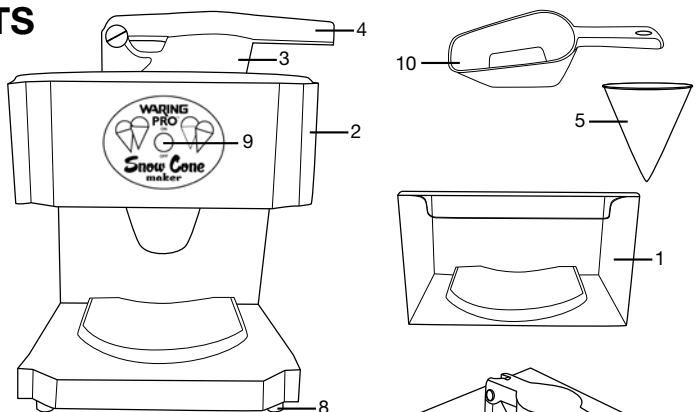

1. Removable snow bin
2. Main housing
3. Ice chute
4. Ice press
5. BPA-free plastic cones (4)
6. Paper cones (12) – not shown
7. Fold-away cone storage
8. Non-skid feet
9. Toggle switch (on/off)
10. Ice scooper

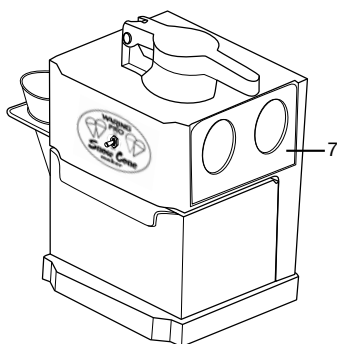

## SAFETY FEATURES

- Interlock removable snow bin – ice shaving mechanism will not start if the snow bin is not correctly placed beneath it. This eliminates the chance of fingers or foreign objects getting in and prevents ice from flying out.
- Interlock ice chute – ice shaving mechanism will not start until ice press is closed. This ensures that fingers and foreign objects will not get in.

## CLEANING AND MAINTENANCE

**Before performing any cleaning and maintenance operations please be sure that the toggle switch is in the Off position and that the unit is unplugged.**

1. **NEVER IMMERSE UNIT IN WATER OR PLACE IN DISHWASHER.**
2. Shortly after you are finished shaving ice, left over water may drip through the ice chute. **DO NOT ATTEMPT TO**

**STOP THIS BY INSERTING ANY OBJECTS INTO THE ICE CHUTE.** Simply wait a minute or two until all the water has dripped down.

3. Wash snow bin, plastic cones and ice scooper using a non-abrasive cleaner and water. Dry thoroughly.
4. Wipe main housing and ice press with a clean damp cloth.
5. Any other servicing should be completed by an authorized service center.

## **RECIPES AND SUGGESTIONS**

The Waring Pro™ Snow Cone Maker is essential for everyday and special occasion entertaining, effortlessly crushing ice at the flip of a switch. Easy and safe operation makes it a fun activity for the whole family. Making up to 3 snow cones in less than 30 seconds, the Snow Cone Maker will be a hit at children's parties.

**You can purchase store-made snow cone flavors or try creating your own with the below recipes:**

### **Traditional Snow Cones**

#### **Ingredients:**

- **2 cups granulated sugar**
- **1 tablespoon extract of your choice**
- **2 cups of water**
- **2 quarts (8 cups) finely crushed ice**
- **Food coloring (optional)**

#### **Preparation:**

Combine one cup of water with two cups granulated sugar in a small saucepan. Bring the mixture to a boil over medium-high heat. Continue heating the mixture until all of the sugar has dissolved, and you are left with a slightly syrupy consistency. Add one tablespoon of your extract of choice (peppermint, lemon, and vanilla all work well). Add a few drops of food coloring, if desired, to the syrup. Stir well to combine all ingredients, and allow the snow cone syrup to cool in the refrigerator for a few hours before drizzling over shaved ice.

### **Kool-Aid Snow Cones**

(Quick and Easy)

#### **Ingredients:**

- **1 envelope of your favorite flavor of powdered Kool-Aid (unsweetened)**
- **1 cup of sugar**
- **1/2 cup cold water**
- **2 quarts(8 cups) finely crushed ice**

Preparation:

Place Kool-Aid powdered mix into a small bowl or pitcher. Add cold water; stir until drink mix and sugar are dissolved. For each serving, pour about 1 tablespoon of the drink mix over 1 cup of ice.

## **Fruity Snow Cones**

**Ingredients:**

- **2 cups white sugar**
- **1 cup water**
- **1 (0.13 ounce) package unsweetened, fruit-flavored soft drink mix**
- **2 quarts(8 cups) finely crushed ice**

Preparation:

In a saucepan, combine the sugar and water. Bring to a boil, and boil for about 1 minute. Remove from heat, and stir in the powdered drink mix. Allow to cool in the refrigerator, and store in a container that will be easy to pour. Pour the mixture over shaved ice to flavor.

## **Fresh Fruit Snow Cones**

**Ingredients:**

- **1/2 bag fresh or frozen organic fruit (strawberry, blueberry, or other)**
- **¼ – ½ cup sweetener (Agave nectar, maple syrup or simple syrup from organic sugar) to taste**
- **2 quarts(8 cups) finely crushed ice**

Preparation:

When using frozen fruit, thaw the fruit for one to two hours, and then blend until smooth. Add the sweetener of your choice, mix and then pour over ice to taste.

## **Ice Cream Flavored Snow Cones**

**Ingredients:**

- **4 ounces evaporated milk (cream)**
- **2 ounces concentrate of your choice**
- **2 quarts(8 cups) finely crushed ice**

Preparation:

Combine evaporated milk with the concentrate of your choice (concentrates that work great as cream flavors are banana, peach, vanilla (most popular cream flavor), strawberry, pina colada, coconut, acidic flavors will not work well with the evaporated milk). Then pour mixture over crushed ice. NOTE: Once the evaporated milk is added, the flavor must be refrigerated and will last for approximately 4 to 5 days.

Trademarks or service marks of third parties used herein are  
the trademarks or service marks of their respective owners.

©2011 Waring Consumer Products  
150 Milford Road  
East Windsor, NJ 08520  
[www.waringpro.com](http://www.waringpro.com)

Printed in China  
WSCM200MRPC IB  
11WR127968

IB-10762