

CONNECTING STRING LIGHTS

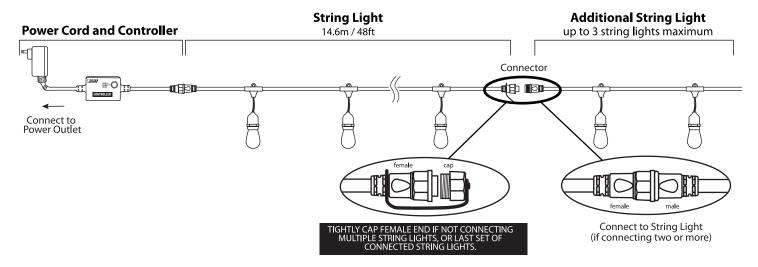


INSTALLATION METHODS

1. Using a Guide Wire with S-hooks or zip ties (not included)

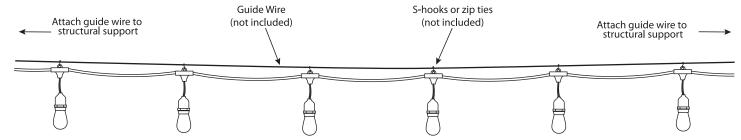

2. Attached to a Structure

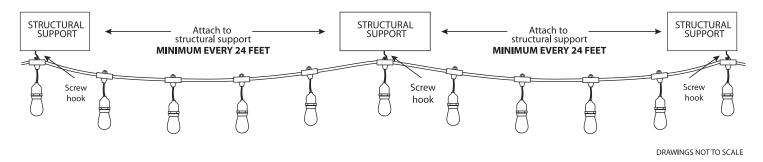

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 2 years from date of purchase. If it fails to do so, please contact Feit Electric at info@feit.com or call 1-866-326-BULB (2852) for instructions on replacement. This replacement is the sole remedy available and liability for incidental or consequential damage is expressly excluded. Do not return the product to the store. For comments please contact: Feit Electric Customer Service 4901 Gregg Road, Pico Rivera, CA 90660. www.feit.com

SAVE THESE INSTRUCTIONS



MODEL 72031



LED STRING LIGHT INSTALLATION INSTRUCTIONS



IMPORTANT RETAIN FOR FUTURE USE: READ CAREFULLY

WARNING: When using outdoors basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Install in accordance with these instructions and current electrical codes such as the National Electric Code (NEC). Note. This product has not been evaluated under section 590 of the NEC.

When used outdoors in Wet Locations, Ground Fault Circuit Interrupter protection (GFCI) is to be provided on the circuits or outlets. Extension cords rated for outdoor use must be used, such as type: SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, SJEW, SJEOW, SJEOW, SJOW, SJOW, SJOW, SJTW, SJTOW or SJTOOW. The connector cover should always be in place to prevent the entry of water (unless a string light connector is inserted).

POWER SUPPLY

Caution: Risk of Electric Shock. Avoid making connections or disconnections when the equipment is wet. Do not use with extension cord near water or where water may accumulate. Do not submerse.

CAUTION – To reduce the risk of fire, electric shock or injury to persons:

- 1. Feit Electric String Lights are intended for installation indoor or outdoor.
- String Lights must be supported by steel guide cables or other suitable supporting hardware such as s-hooks, screw hooks or zip ties (not included) whenever span distances exceed twenty four feet. See Installation Methods on reverse.
- Lights should be installed so that bulbs are facing down ONLY.
- Do NOT secure light string to buildings or other structural supports using nails, staples or other sharp, conducting materials. DO NOT DAMAGE THE WIRE.
- Avoid damage to the insulation during installation. Do NOT pierce or other wise compromise wire's or socket's outer covering, jacket or sheathing.
- Periodically inspect wire and sockets for degradation due to weather, UV light or other damage. Promptly replace worn out light string.

WARNING: – RISK OF ELECTRIC SHOCK!!

Disconnect power supply at source prior to wiring, replacing light bulbs or servicing in any way.


BULB REPLACEMENT


- 1. Unscrew bulb lens counter clock-wise
- 2. Remove LED bulb by pulling on LED stem
- 3. Insert new LED bulb aligning guide on module to groove inside socket
- 4. Gently push in LED bulb until it's flush with socket
- 5. Screw in bulb lens clock-wise



Includes two extra bulbs. Bulbs last up to 25,000 hours. Additional bulbs available at www.costco.com



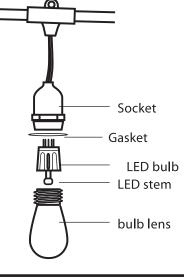

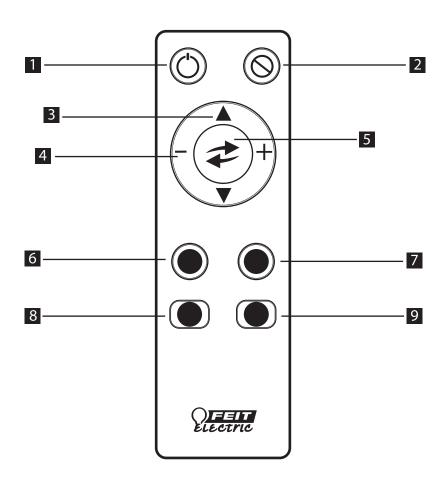


REMOTE CONTROL

(See illustration)

- 1 ON: Turns the lights ON.
- 2 OFF: Turns the lights OFF.
- 3 INCREASE/DECREASE BRIGHTNESS: Press (▲/▼) to choose brightness level. (Only works in single color mode)
- 4 COLOR CHANGING SPEED: Press (-/+) to decrease or increase the color changing speed. (only works in color combination mode)
- MODE BUTTON: Press button to select one of the 9 color combination modes. (see chart to right)
- 6 RED: Press to change string light color to RED.
- **7** GREEN: Press to change string light color to GREEN.
- 8 BLUE: Press to change string light color to BLUE.
- 9 WHITE: Press to change string light color to WHITE.

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

Cet article contient une pile bouton. En cas d'ingestion, cette pile pourrait causer de graves blessures ou la mort en deux heures. Demandez l'aide d'un professionnel la santé immédiatement.

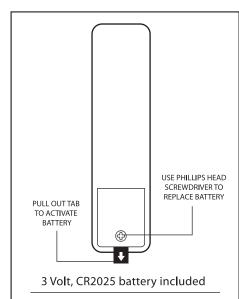

RESETTING REMOTE CONTROL

- Adding or replacing remote control
- Remote is not working correctly
- **1.** Turn power OFF by unplugging string light power supply.
- 2. Press and hold ON button on remote.
- **3.** While holding ON button, plug-in string light power supply. Bulb will flash 3 times. You've successfully programed your remote.


Additional remote controls available at www.costco.com



MODE BUTTON FUNCTIONS

- 1. Red to green
- 2. Red to blue
- 3. Red to white
- 4. Green to blue
- 5. Green to white
- 6. Blue to white
- 7. Red to green to blue
- 8. Red to white to blue
- 9. Red to green to blue to white

Este producto contiene una pila de botón. En caso de ingestión, puede provocar lesiones graves o la muerte en tan sólo 2 horas. Busque atención médica de inmediato.

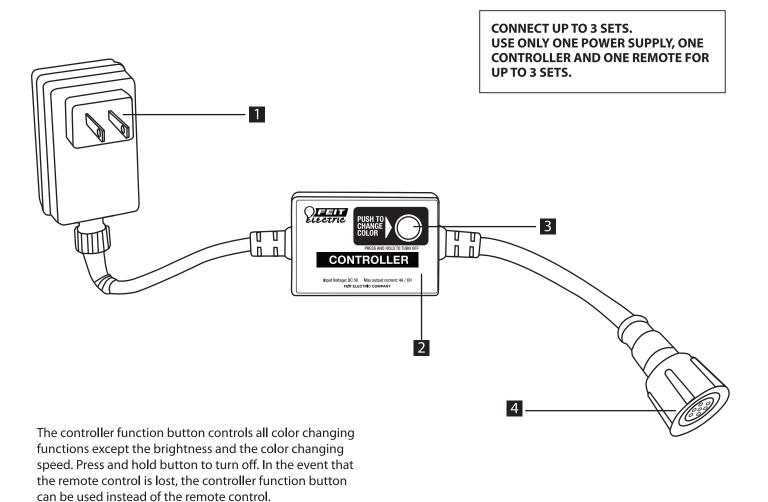

- 1 Power Supply
- 2 Controller
- ONTROLLER FUNCTION BUTTON: Press button to select one of the 13 color combination modes. (see chart to right)

 Press and hold button to turn off.
- 4 String light connection adapter.

When unit is turned on, it will start at the last mode.

CONTROLLER FUNCTION BUTTON

- 1. Red
- 2. Green
- 3. Blue
- 4. White
- 5. Red to green
- 6. Red to blue
- 7. Red to white
- 8. Green to blue
- 9. Green to white
- 10. Blue to white
- 11. Red to green to blue12. Red to white to blue
- 13. Red to green to blue to white