

makers of the living experience™

For over 30 years our mission at Abbyson has been to bring homes to life with stylish and expertly crafted furniture that meets today's modern living trends at great value.

As your home furnishing needs continue to grow, Abbyson is there to help you express your lifestyle and complete your home.



Power Recliner Operating Instructions

IMPORTANT

Read the instructions and tips before using your Power Reclining product. Keep this manual for future reference.

Contact Abbyson Living's customer service department at
1.888.406.0838 with any further questions or concerns.

Available Monday through Friday
9am - 5pm PST

For more information, please visit our website at
www.Abbyson.com

DISCLAIMER: This advice is provided by Abbyson Living only as a courtesy. No guarantee or warranty is included or to be inferred from this advice. Abbyson Living will not be held liable for any incidental or consequential damage or injuries sustained from the use of this advice. The use of the information in this document by anyone constitutes acceptance of these terms.

Power Reclining Operating Instructions

Important: Read these instructions thoroughly before using product

- To reduce the risk of damaging the product, do not operate the unit until the back is installed and locked. Plug it in once it's fully assembled.
- Sit down in the recliner slowly. Do not throw your weight against the back of the recliner. Recline the recliner slowly, making sure that no children, pets, or objects are in close proximity.
- To safely exit the recliner, first, slowly bring the back fully upright and close the leg rest by using the power switch and second, carefully exiting the recliner.
- Supervise children and disabled persons when using the recliner.
- Do not place extra weight on the arms, backrest or open leg rest.
- Only the occupant should operate the recliner. Do not attempt to open the leg rest by pulling on it.
- Keep hands, arms and body parts away from the open area between a reclined back and an upright back on a recliner. This area cannot be obstructed during movement.
- To raise the leg rest and recline the back, press and hold the power switch.
- To raise the back and lower the leg rest, press and hold the power switch. Release the power switch when the back and leg rest reach the desired position, or are completely closed.
- Release the power switch when the leg rest and back reach the desired position.
- Abbyson reclining products are intended for a single occupant, not exceeding 300 pounds per seat. Do not operate the recliner with more than one occupant on the recliner.
- The recliner is intended for indoor use only.
- The recliner has many moving parts. Keep hands, fingers and other body parts away from mechanism. Keep children and pets away from openings and moving parts in and around furniture.
- Keep plastic bags away from children.
- Keep flames and other heat sources away from the recliner.
- Do not attempt to disassemble or service mechanical parts; no serviceable parts are inside. Contact Abbyson Living for service.

Exiting Your Recliner

To safely exit the recliner, first, using the power switch, slowly bring the back fully upright and fully close the leg rest. Second, after the back is fully upright and the leg rest is fully closed, carefully exit the recliner without the use of excessive forward momentum. Excessive use of force or momentum to exit the recliner, return it to its fully upright position, or close the leg rest may lead to damage to the recliner or injury.



1. Fully reclined position.



2. Do not sit up until you've brought the recliner to the upright position.



3. Once the foot rest is completely closed, you may safely exit your recliner.

Power Supply Instructions

Follow these steps to install power to your recliner safely

1. Connecting Recliner to Power Supply



2. Connecting Power Supply to Wall Outlet



Electrical Tips

Follow these tips to use your recliner safely

- Plug the power supply directly into the wall outlet. Do not use an extension cord, adapter, or surge protector. The power feature is operated by a power switch, located on the side of the recliner.
- Before moving the recliner, disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening. Never move the recliner by the mechanism, leg rest, handle, reclining back or swivel base.
- Keep the power transformer and electrical cords away from heat sources. Never operate the unit with a damaged power unit. Contact Abbyson Living for service if needed.
- Check the condition of the power transformers, electrical cords, plugs and connectors on a regular basis, at least monthly.
- Do not allow the electrical cord to be caught between moving parts or between the frame and the floor.
- Before moving the product, disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening. Never move the product by the mechanism, leg rest, handle, or reclining back.
- Do not use this recliner if it is damaged. Do not use substitute parts.
- Do not place the cord under carpet or in a location where it could become worn.
- No serviceable parts are inside; do not attempt to modify the recliner in any way. Contact Abbyson Living for service if needed.
- Never operate the unit with a damaged power transformer, electrical cord, plug or connector. Contact Abbyson Living for service.
- Do not use the recliner if it is wet, in water, around water or any other liquid.

Power Reclining Troubleshooting

Follow these instructions if you encounter issues with the recliner



If the power recliner does not operate properly, check the following:

- Make sure the power cord is plugged into an electrical outlet.
- Make sure the electrical outlet is working. Check that there are no blown fuses or tripped circuit breakers.
- Make sure all the connectors are secure.
- Make sure the electric cord or plug is not damaged or pinched.
- Make sure the operating capacity has not been exceeded and there is only one occupant in the individual seat or the recliner.

If the power recliner still does not operate properly, contact Abbyson Living.



Furniture Placement Guide

Follow these instructions on where to safely place your recliner

Provide a clear path for the operation of the back and leg rest of the recliner. Place other furniture and rugs at a distance to allow the leg rest to fully extend without rubbing or interference.



The recliner is a power recliner. Refer to your power recliner's specific distance required from the back and front of the recliner to fully recline safely. Before getting up and out of the recliner, be sure to have the recliner in the full upright position, with the footrest fully closed.