


# 7 ft / 2.13m Lighted LED Blossom Tree

ITEM./ART. 913760 (US)

ITEM./ART. 913817 (Canada and Australia)

ITEM./ART. 151406 (UK)

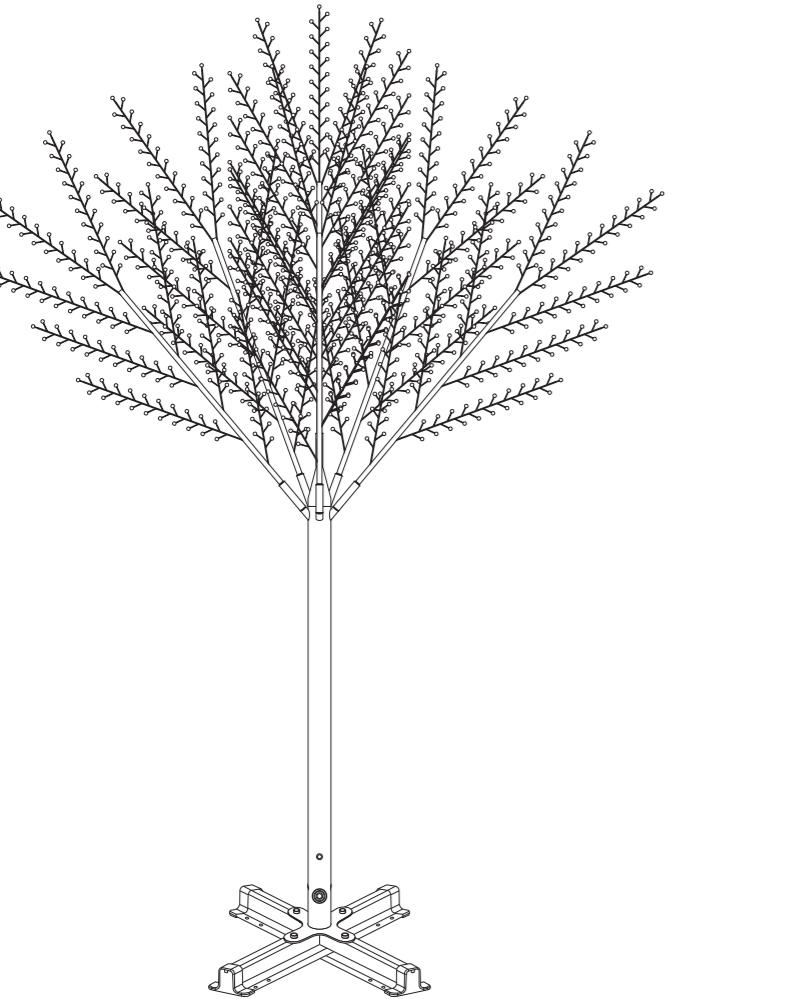

## INSTRUCTION MANUAL

### WARNING: RISK OF FIRE AND ELECTRIC SHOCK

1. Make sure light set is not connected to power before starting assembly.
2. Keep wires from being pinched or cut during assembly, installation or use. Discard products with cut wires.
3. Do not press or grasp bulbs during assembly or installation.
4. This is not a toy. For adult use only. It should not be played with or placed where children can reach it.
5. Make sure stakes are clear of underground sprinkler lines, underground telephone lines, and underground power lines before starting.
6. Please read all instructions and warnings included with this product before using.

### ASSEMBLY INSTRUCTIONS

1. Carefully remove all pieces from the carton. Compare parts with the parts list to confirm all parts are present.
2. Assemble the two base pieces and place them on the floor. Place the base cap over the center of the two base pieces. Secure the base cap using washers and screws. Tighten with allen wrench and cover with screw caps.
3. Install the trunk over the bottom base. Tighten trunk screw.
4. Insert the top branch into the top-center connector on the trunk. Insert the five lower branches into the five remaining connectors on the trunk. Be sure to align the branches so that the branch screws face the ground.
5. Plug the power cord into a socket that is equipped with GFCI (Ground Fault Circuit Interrupter). If a GFCI socket is not available, contact a certified electrician to have one installed. Once the socket is functioning, the tree should light up.


### TROUBLESHOOTING: IF THE LIGHTS DO NOT TURN ON

1. Make sure there is power to the outlet and the product is plugged in.
2. Make sure lights are connected to the adaptor and make sure the connector is fully inserted into the adaptor and is tight.
3. Remove the connector from adaptor, clean contacts and reinstall.
4. Check if the unit is plugged into an outlet controlled by a dimmer or electronic timer. The blossom tree will not work on these circuits. Use a standard outlet.
5. If connected to a GFCI-controlled outlet, reset the GFCI
6. Check for broken wires or connections.

### CARE AND USE INSTRUCTIONS

For best performance, install the item on a flat and level surface. Do not install on a rooftop or hillside. For use indoors and outdoors. Store unit in a cool, dry location protected from sunlight. Avoid stacking assembled items to avoid bulb breakage or other damage. Make sure all plugs and cords are well-protected from being cut, crushed, or otherwise damaged. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the bulb holders or enclosures, loose connections, or exposed copper wire.

### List of Parts:

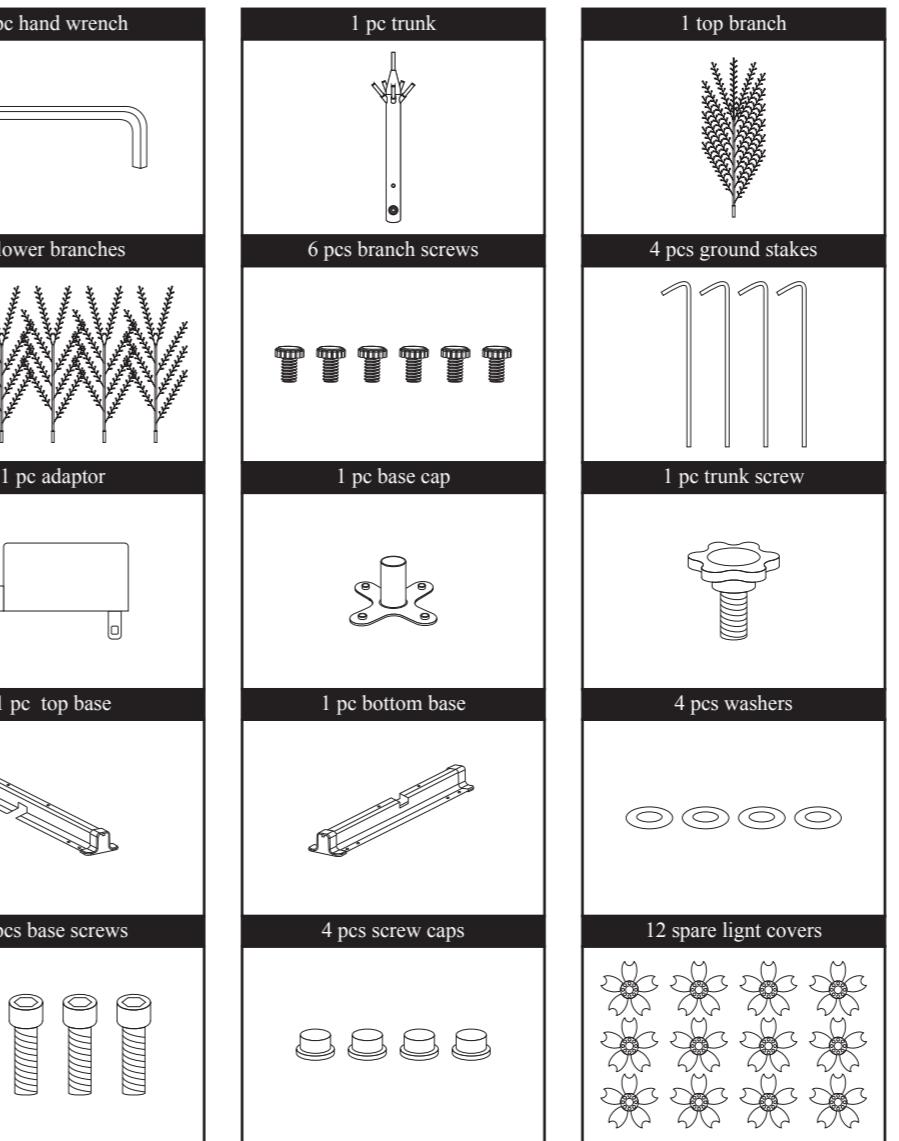

### Importé par/Imported by:


Costco Wholesale UK Ltd  
Hartspring Lane  
Watford, Herts  
WD25 8JS  
United Kingdom  
01923 213113  
[www.costco.co.uk](http://www.costco.co.uk)

Costco Wholesale Corporation  
P.O. Box 34535  
Seattle, WA 98124-1535  
USA  
1-800-774-2678  
[www.costco.com](http://www.costco.com)

Costco Wholesale Australia Pty Ltd  
17-21 Parramatta Road  
Lidcombe NSW 2141  
Australia  
[www.costco.com.au](http://www.costco.com.au)


Costco Wholesale Canada Ltd.\*  
415 W. Hunt Club Road Ottawa, Ontario,  
Canada K2E 1C5 1-800-463-3783  
\*faisant affaire au Québec sous le  
nom Les Entreports Costco  
[www.costco.ca](http://www.costco.ca)

Limited 1-year Warranty

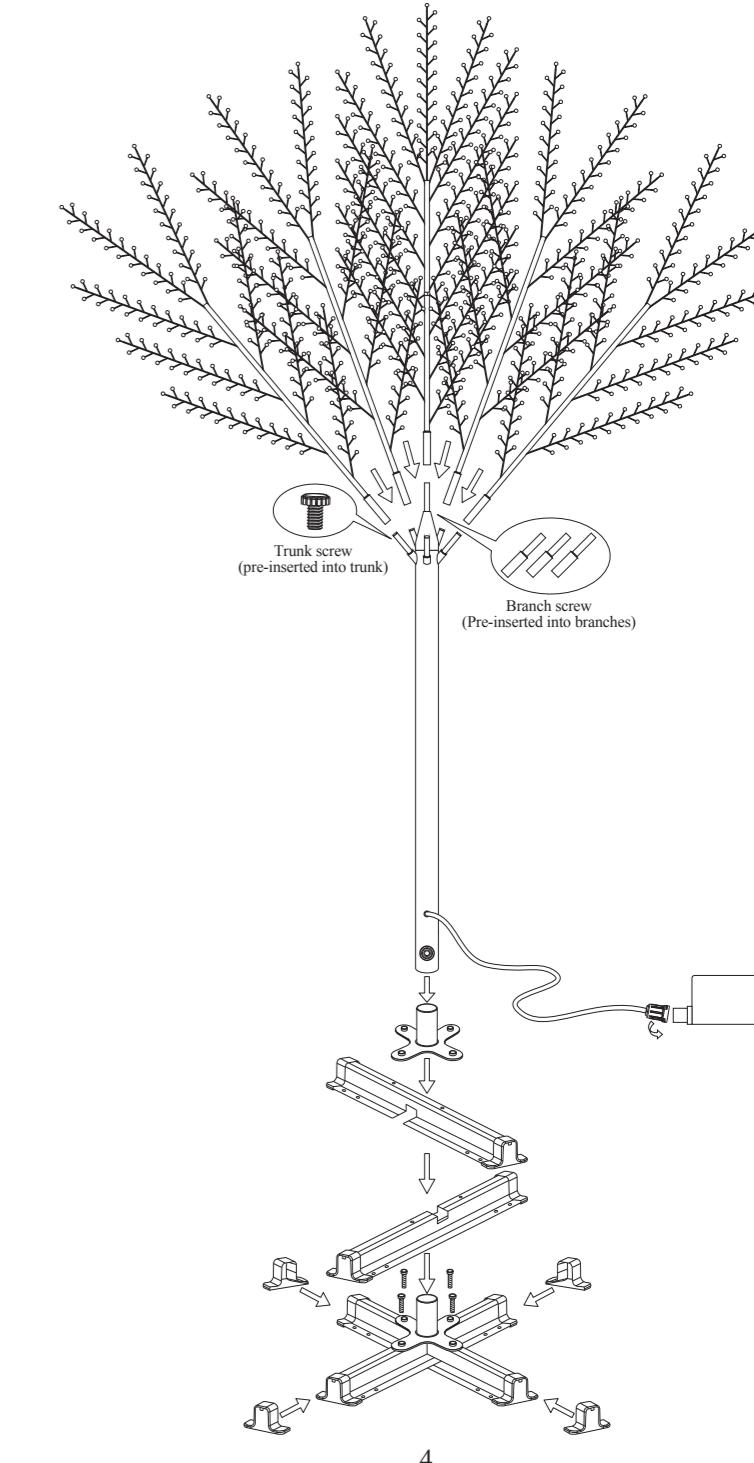

# Arbre en fleur illuminé par DEL de 2,13 m/7 pi

ITM./ART. 913760 (US)  
 ITM./ART. 913817 (Canada and Australia)  
 ITM./ART. 151406 (UK)

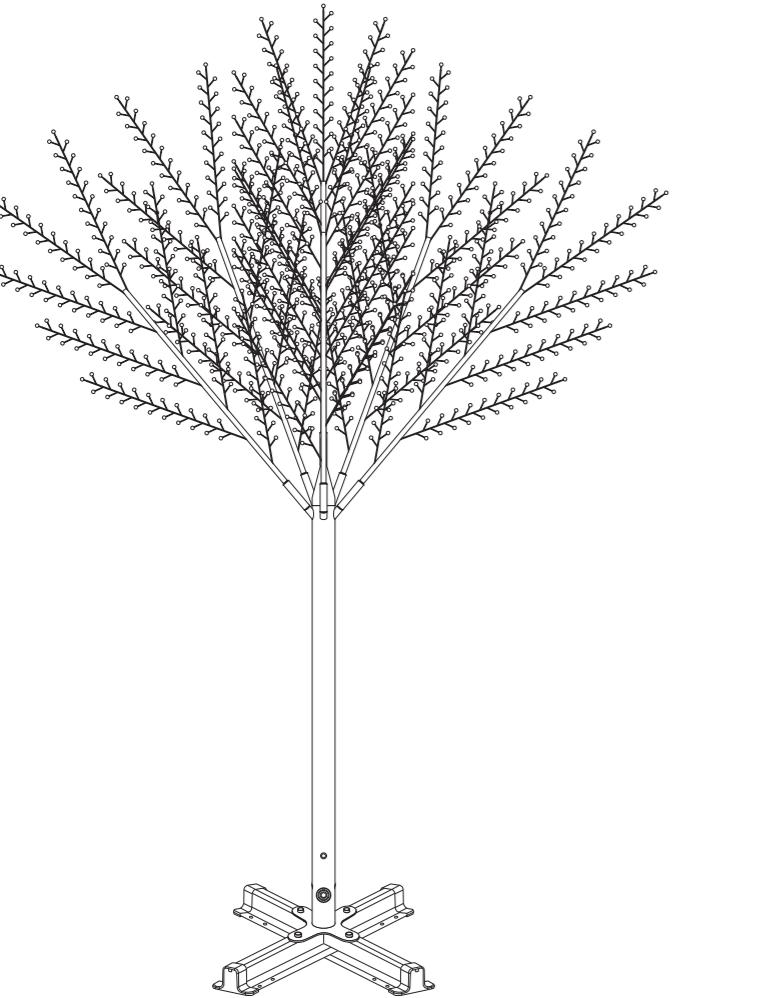

1

## INSTRUCTIONS

### MISE EN GARDE : RISQUE D'INCENDIE ET DE CHOC ÉLECTRIQUE

- 1.Vérifier que l'ensemble n'est pas branché avant de commencer l'assemblage.
- 2.S'assurer de ne pas pincer ou couper les fils conducteurs pendant l'assemblage, pendant l'installation ou pendant l'utilisation. Jeter tout produit dont l'isolant des fils est coupé.
- 3.Ne pas serrer ou appuyer sur les ampoules pendant l'assemblage ou l'installation.
- 4.Ceci n'est pas un jouet. Pour une utilisation par des adultes uniquement. Ne pas jouer avec le produit et ne pas le laisser à la portée des enfants.
- 5.Vérifier que les piquets de sol ne rencontreront ni ligne d'arrosage, ni ligne de téléphone, ni ligne électrique avant l'utilisation du produit.
- 6.Lire toutes les instructions et les mises en garde fournies avec le produit avant de l'utiliser.

### INSTRUCTIONS D'ASSEMBLAGE

- 1.Sortir les pièces avec délicatesse de la boîte. Vérifier avec la liste de pièces qu'il n'en manque aucune.
- 2.Assembler les deux pièces de la base au sol. Mettre le capuchon de la base sur le centre. Fixer la base avec les vis et les rondelles. Serrer avec une clef hexagonale et couvrir avec les capuchons de vis.
- 3.Installer le tronc sur la base inférieure. Serrer la vis de tronc.
- 4.Mettre la branche supérieure dans le connecteur central du tronc. Mettre les cinq branches restantes dans les trous du tronc restant. Aligner les branches pour que les vis soient tournées vers le sol.
- 5.Brancher dans une prise connectée à un disjoncteur de fuite à la terre. S'il n'y en a pas, contacter un électricien qualifié pour qu'il en installe un. Une fois que la prise fonctionne l'arbre devrait s'allumer.


### DÉPANNAGE : SI LES AMPOULES NE S'ALLUMENT PAS

- 1.Vérifier que le produit est bien connecté à une source d'électricité de 120 V.
- 2.Vérifier que le produit est bien connecté à l'adaptateur et que le connecteur est inséré complètement et fermement dans l'adaptateur.
- 3.Débrancher le connecteur de l'adaptateur, nettoyer les contacts et remettre en place.
- 4.Vérifier si le produit est connecté à une prise contrôlée par rhéostat ou une minuterie électrique, car le produit ne fonctionnera pas. Utiliser une prise standard de préférence.
- 5.Si l'article est branché à une prise avec disjoncteur de fuite à la terre, réenclencher le disjoncteur au cas où il aurait été activé
- 6.Vérifier s'il y a des fils ou des connexions coupés.

### ENTRETIEN ET UTILISATION

Pour obtenir la meilleure performance, disposer le produit sur une surface plane et de niveau. Ne pas l'installer sur un toit ou dans une pente. Pour une utilisation à l'intérieur et à l'extérieur. Entreposer le produit dans un endroit frais et sec à l'abri de la lumière du soleil. Ne pas entasser les produits assemblés pour éviter de casser les ampoules ou toute autre pièce. Vérifier que les prises et les cordons d'alimentation sont bien protégés contre d'éventuelles coupures et contre l'écrasement et l'abrasion entre les pièces. Se débarrasser de tout produit qui présente des coupures, des fils ou des rallonges dénudées ou effilochées, des douilles fissurées, des connexions lâches ou du fil de cuivre dénudé.

### Liste des pièces:

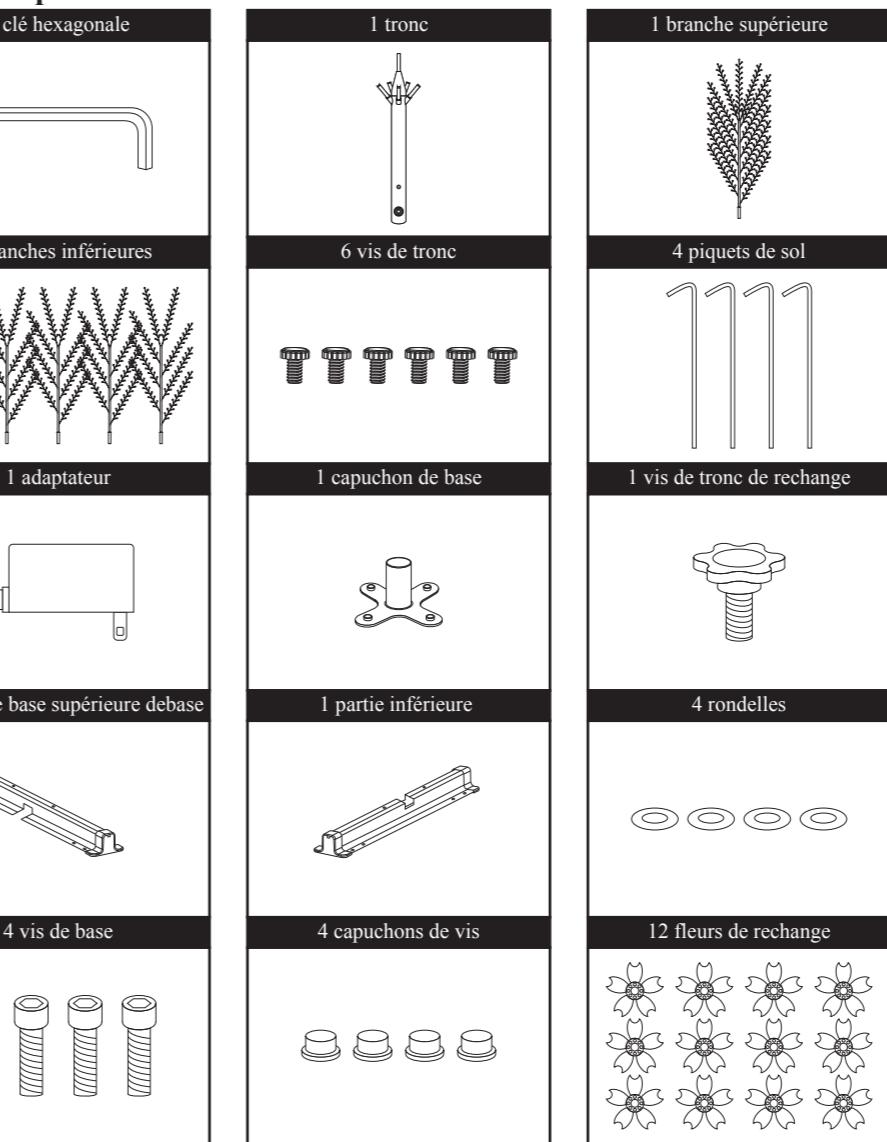

### Importé par/Imported by:


Costco Wholesale UK Ltd  
 Hartspring Lane  
 Watford, Herts  
 WD25 8JS  
 United Kingdom  
 01923 213113  
 www.costco.co.uk

Costco Wholesale Corporation  
 P.O. Box 34535  
 Seattle, WA 98124-1535  
 USA  
 1-800-774-2678  
 www.costco.com

Costco Wholesale Australia Pty Ltd  
 17-21 Parramatta Road  
 Lidcombe NSW 2141  
 Australia  
 www.costco.com.au

Costco Wholesale Canada Ltd.\*  
 415 W. Hunt Club Road Ottawa, Ontario,  
 Canada K2E 1C5 1-800-463-3783  
 \*faisant affaire au Québec sous le  
 nom Les Entrepôts Costco  
 www.costco.ca

Garantie limitée de 1 ans

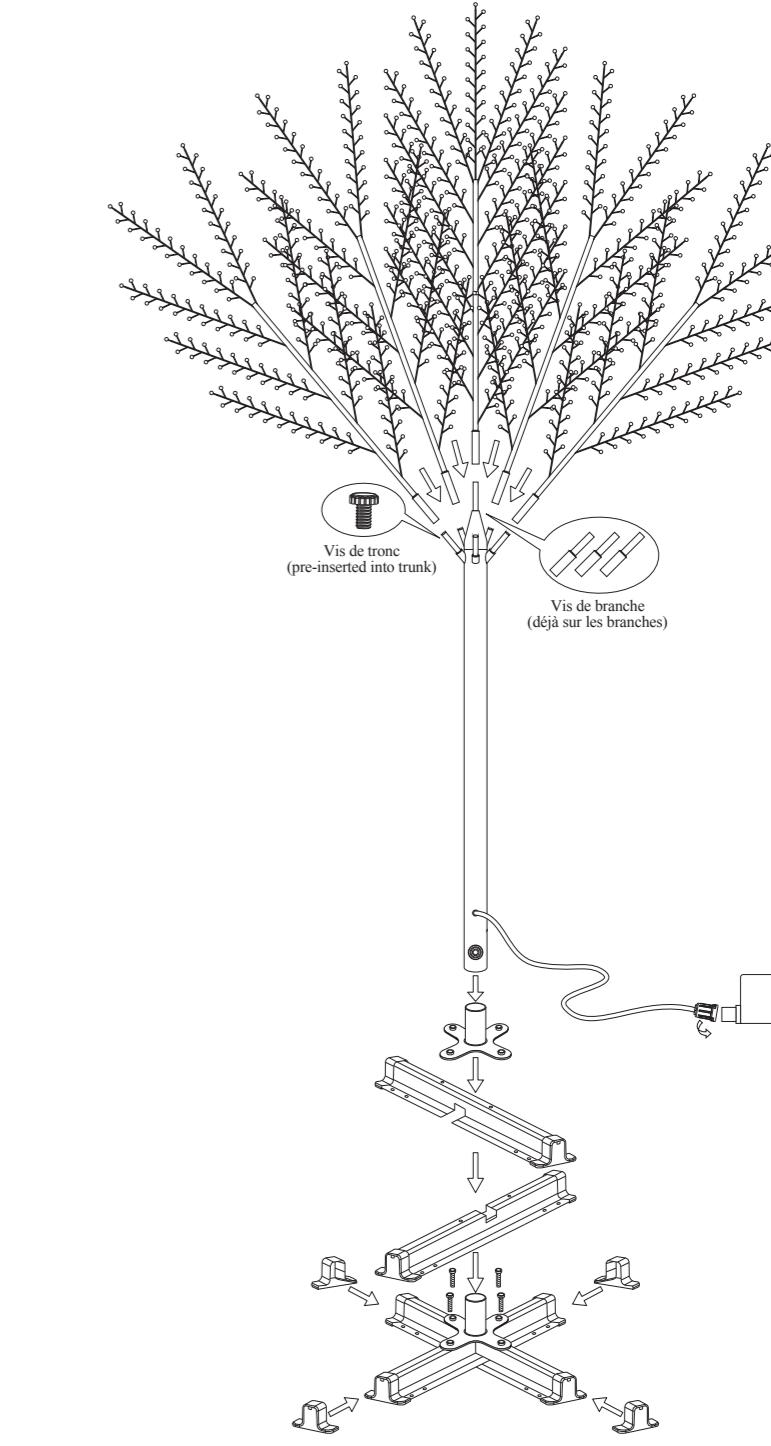

2

3

4