

CARE AND MAINTENANCE

FRAMES

Cleaning - Use mild soap and warm water. Do not use abrasive materials, cleansers or bleach products. Rinse with clean water and dry thoroughly.

Maintenance - Periodically clean and dry thoroughly. Be sure to drain any water accumulated inside the frames. To thoroughly drain frames, remove foot caps and tilt the frames, if necessary, to remove all water. This is critical. Water allowed to accumulate inside the frames and then exposed to sub-freezing temperatures can cause damage to the frame tubing. Such damage is not covered under warranty. Always clean, drain and dry thoroughly before storing for the winter. For best results, always store or cover your furniture when not in use (furniture cover included). We recommend commercially available outdoor furniture covers. Any small nicks or scratches can be covered with a light application of touch-up paint.

****** When cleaning or moving large or heavy items, always have two people work together. Never drag furniture.

FABRICS (CUSHIONS/SLINGS)

Cleaning - Wipe minor spills immediately. Clean with mild soap, warm clean water and a soft cloth. Do not use abrasive materials and cleansers. Although fabric has been treated to resist stains, occasional use of commercially available fabric cleaners may be necessary. Follow manufacturer's instructions.

Maintenance - The best way to maintain the beauty of cushions and slings is to store them in a dry area and out of the elements when not in use, or cover with commercially available outdoor furniture covers.

PORCELAIN

To ensure the lasting beauty of your porcelain table top. Please refer to the special porcelain care label that is attached to the underside of your table top. Detailed care and maintenance instructions are also available by visiting our website at www.agio-usa.com/porcelaincare or by calling our Customer Service Centre at 1-888-383-1932.

KIRKLAND SIGNATURE™ 5 PIECE FIREPLACE SEATING GROUP ITM./ART. 966646 PATIO FURNITURE ASSEMBLY INSTRUCTIONS IMPORTANT RETAIN FOR FUTURE REFERENCE: READ CAREFULLY BEFORE ASSEMBLY

**MAKE SURE YOU HAVE ALL THE PARTS & HARDWARE
AS IDENTIFIED ON THE PARTS LIST**

**MISSING PARTS OR DAMAGED PARTS?
Please call our customer service**

**US & Canada :1-888-383-1932 (English and French)
United Kingdom :0-800-092-1653 (English)**

or visit our website at www.agio-usa.com

**CUSTOMER SERVICE HOURS ARE 9:00AM - 5:00PM
MONDAY - FRIDAY EST.**

**TO EXPEDITE ANY FUTURE WARRANTY CLAIMS AND TO RECEIVE
UPDATED PRODUCT INFORMATION, BE SURE TO REGISTER YOUR
PURCHASE ON OUR WEBSITE AT: www.agio-usa.com**

**FOR ADDITIONAL SUPPORT ON CARE AND MAINTENANCE OF
YOUR AGIO OUTDOOR FURNITURE PLEASE VISIT OUR WEBSITE
AT: www.agio-usa.com/support**

SPECIAL WARNINGS

THIS ITEM IS INTENDED FOR OUTDOOR DOMESTIC USE ONLY, NOT FOR COMMERCIAL USE.

LIMITED 7 YEAR WARRANTY

- **Aluminum Frame.** Frame construction is warranted against defects in material and workmanship for seven years from purchase date. Damage to frames or welds resulting from improper assembly or exposure to water and/or sub-freezing temperatures is not covered.

LIMITED 1 YEAR WARRANTY

- **Finishes.** Paint finishes are warranted against peeling, cracking and blistering for one year from purchase date provided the unit has not been scratched or abraded. Chips and scratches resulting from normal wear and tear are not covered.
- **Fabrics.** Fabric and cushions (if applicable) are warranted against separation at the seams for one year from purchase date. Fading and/or discoloration resulting from exposure to the elements, oils, spills, fluids, chemicals, or any other cause is not covered.
- **Table tops.** Porcelain table tops are warranted against defects in materials and workmanship for one year from purchase date. All other tabletops (including without limitation glass and faux stone) are not covered under any circumstances.

Warranty limitations: This warranty is subject to the limitations set forth above. In addition, this warranty is made to the original purchaser only, and is effective only when item(s) is purchased from one of our authorized dealers. This warranty is not transferable. For warranty replacements based on warranty claims submitted within first year of purchase, we will pay shipping and handling charges within continental North America. After the first year, shipping and handling charges are your responsibility. We will not be responsible for charges associated with shipments outside continental North America at any time or for any reason.

Warranty exclusions: This warranty is subject to the exclusions as set forth above. In addition, the following are excluded from coverage under this warranty: display models or items purchased "as is"; freight damage; items subject to misuse, abuse, neglect or lack of proper care and maintenance (including without limitation as provided in any "care and maintenance guide"); normal wear and tear; damage caused by acts of nature, acts of force majeure, vandalism, fire or other casualty, or improper assembly; hardware against corrosion or rusting; purchased or replacement parts; and all plastic parts. Also excluded are loss of use or time; inconvenience; money; travel; packaging or incidental, special or consequential damages of any kind. Replacement of defective items as provided herein shall constitute your sole and exclusive remedy for items which are not as warranted. In no event shall our responsibility exceed the purchase price of the items found to be other than as warranted. This warranty is the exclusive statement of your rights with respect to the defects in the items you have purchased and supersedes any other express warranty or statement, written or oral, made in connection with the purchase and sale of such items. When used herein, the term "item" when used in the singular, refers to the specific item found to be defective, and not to the entire set of which the item is a part.
















Some states do not allow exclusion or limitation of incidental or consequential damages, so the limitation above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

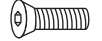***Agio will be responsible for the shipping and handling charges within the North American continent for the first year for all valid warranty claims. After the first year, shipping and handling charges are the responsibility of the claimant. We do not ship outside of the North American continent.**

Every Kirkland Signature Product is guaranteed to meet or exceed the quality standards of the leading national brands. If you are not completely satisfied, your money will be refunded by Costco.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

* NOTE: PARTS SHOWN ON PARTS LIST ARE NOT TO SCALE



	<u>PARTS LIST</u>	<u>DESCRIPTION</u>	<u>ORDER PART #</u>	<u>QTY</u>
A		BACK FRAME	AH1136	1
B		SEAT FRAME	AH1137	1
C		LEFT LEG	AH1138	1
D		RIGHT LEG	AH1139	1
E		LEG SUPPORT	AH1140	1
F		SHORT SCREW	HW0035	2
G		MIDDLE SCREW	HW0752	2
H		LONG SCREW	HW0086	6
I		WASHER	HW0004	6
J		SCREW COVER	HW0105	6
K		SCREW COVER	HW0022	2
L		ALLEN WRENCH	HW0252	1
M		FOOT CAP-1	FC0716	2
N		FOOT CAP-2 <i>FACTORY ASSEMBLY</i>	FC0010	2
O		FURNITURE COVER	22-FC-0107	1

**KIRKLAND SIGNATURE™
5 PIECE FIREPLACE SEATING GROUP
ITM./ART. 966646**




**IMPORTANT!!
PLEASE READ ENTIRE
INSTRUCTION SHEET
BEFORE ASSEMBLY!!**

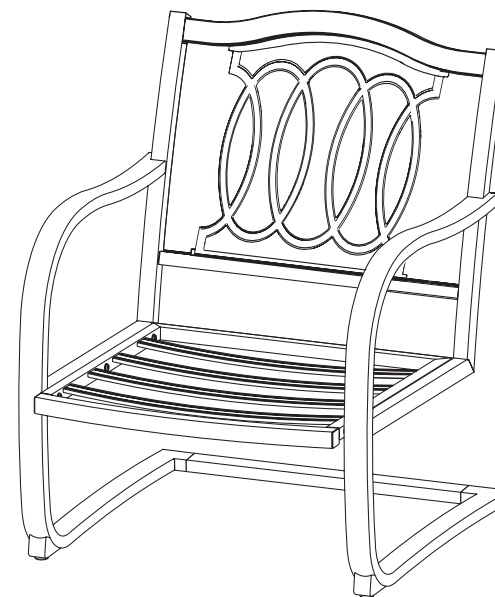



*The furniture cover (O) is designed to protect your investment from the elements and will repel water. Please note the cover is not 100% waterproof and moisture may seep in if allowed to collect.

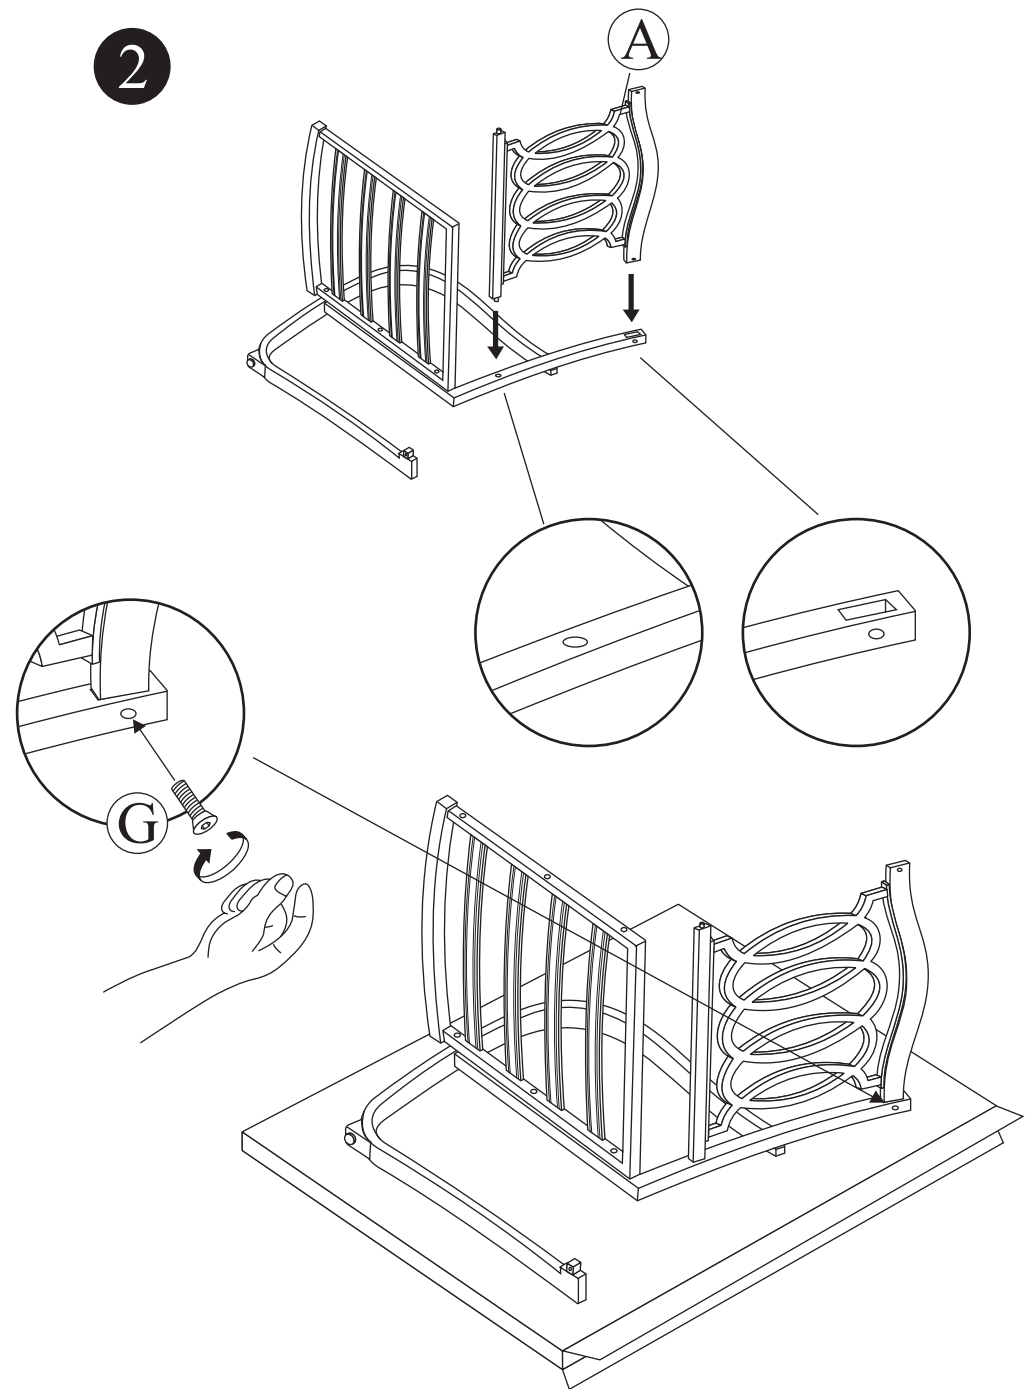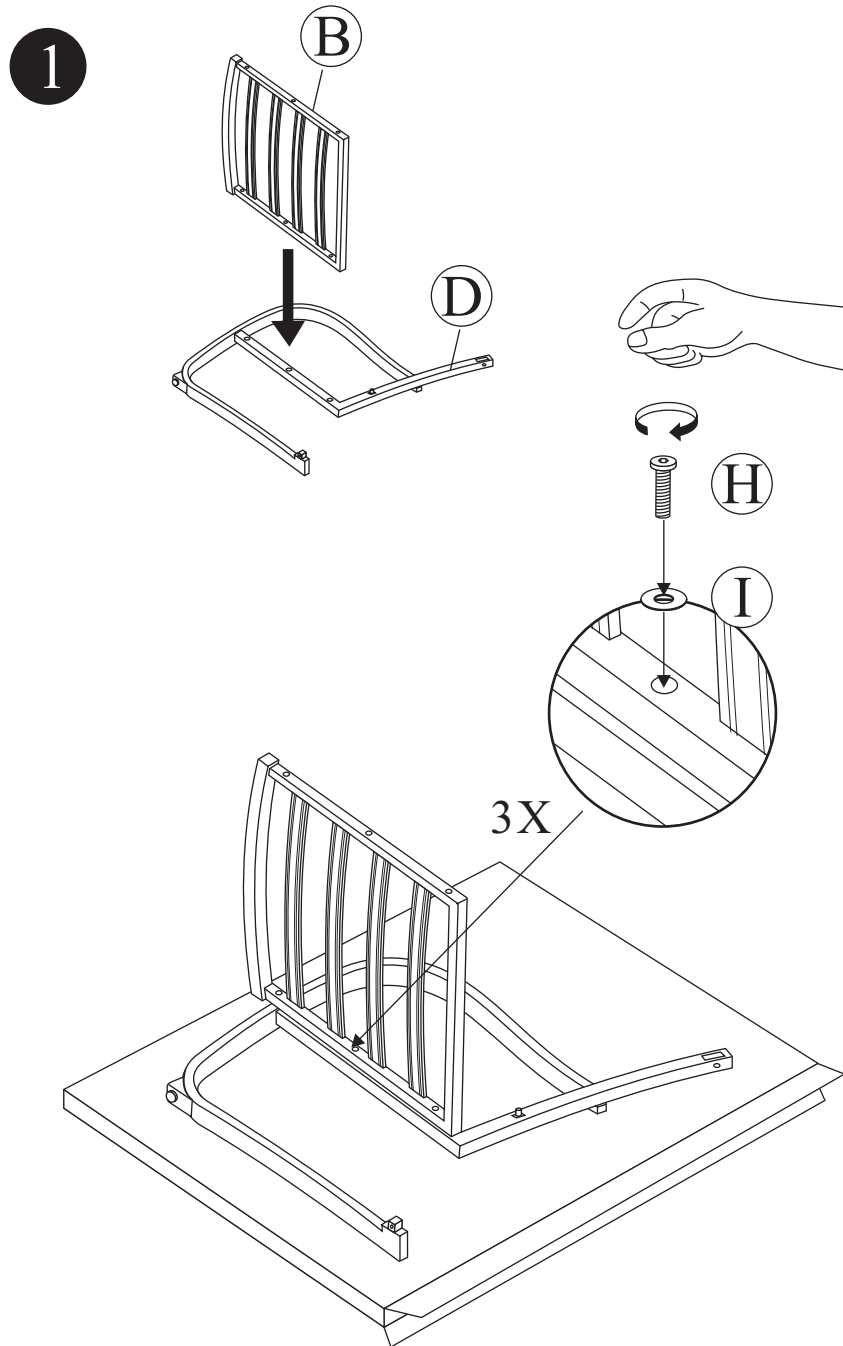

3

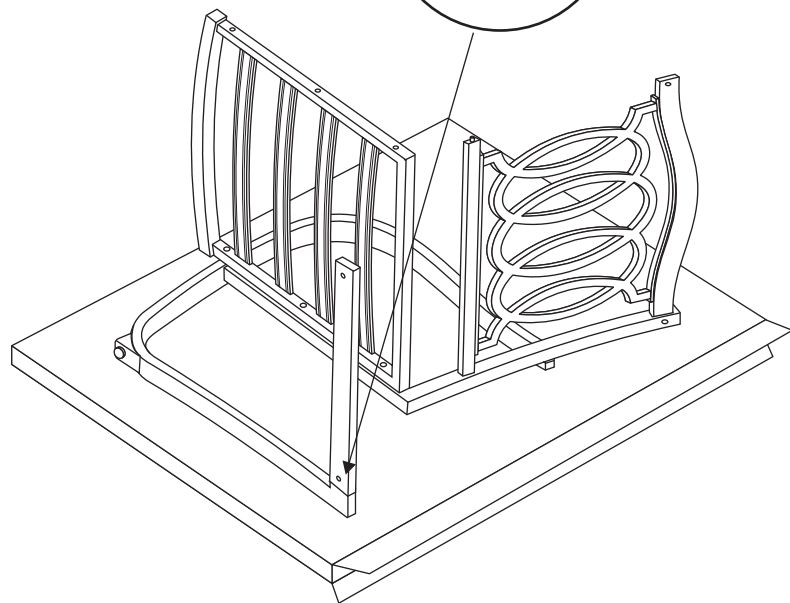
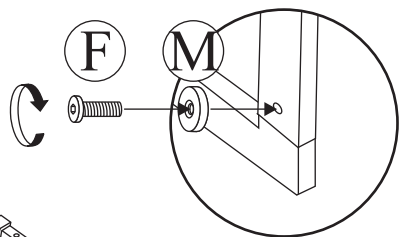
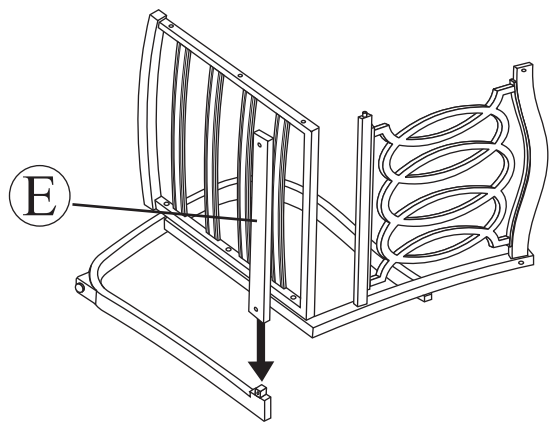


4

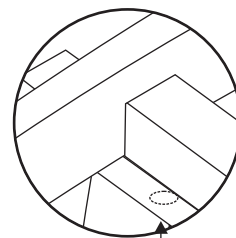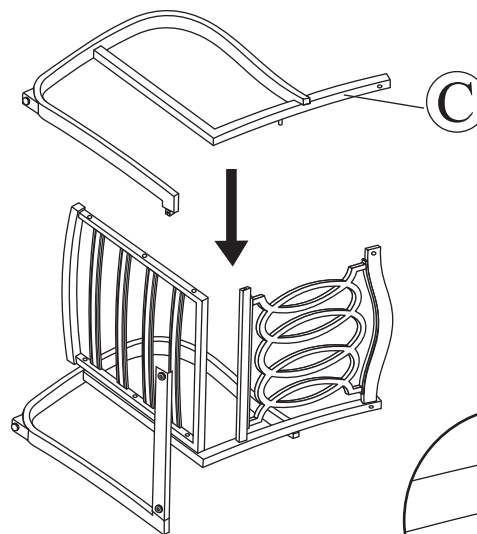


I

H

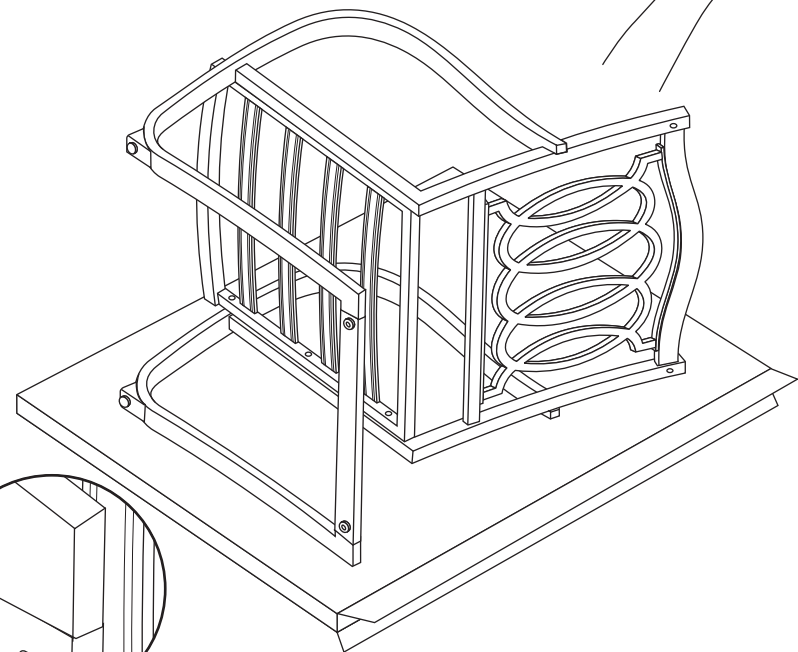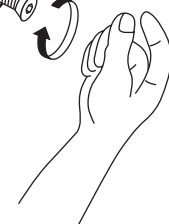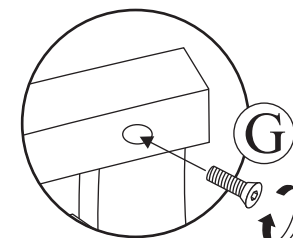


F


M

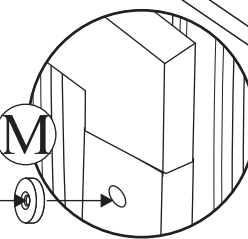



5

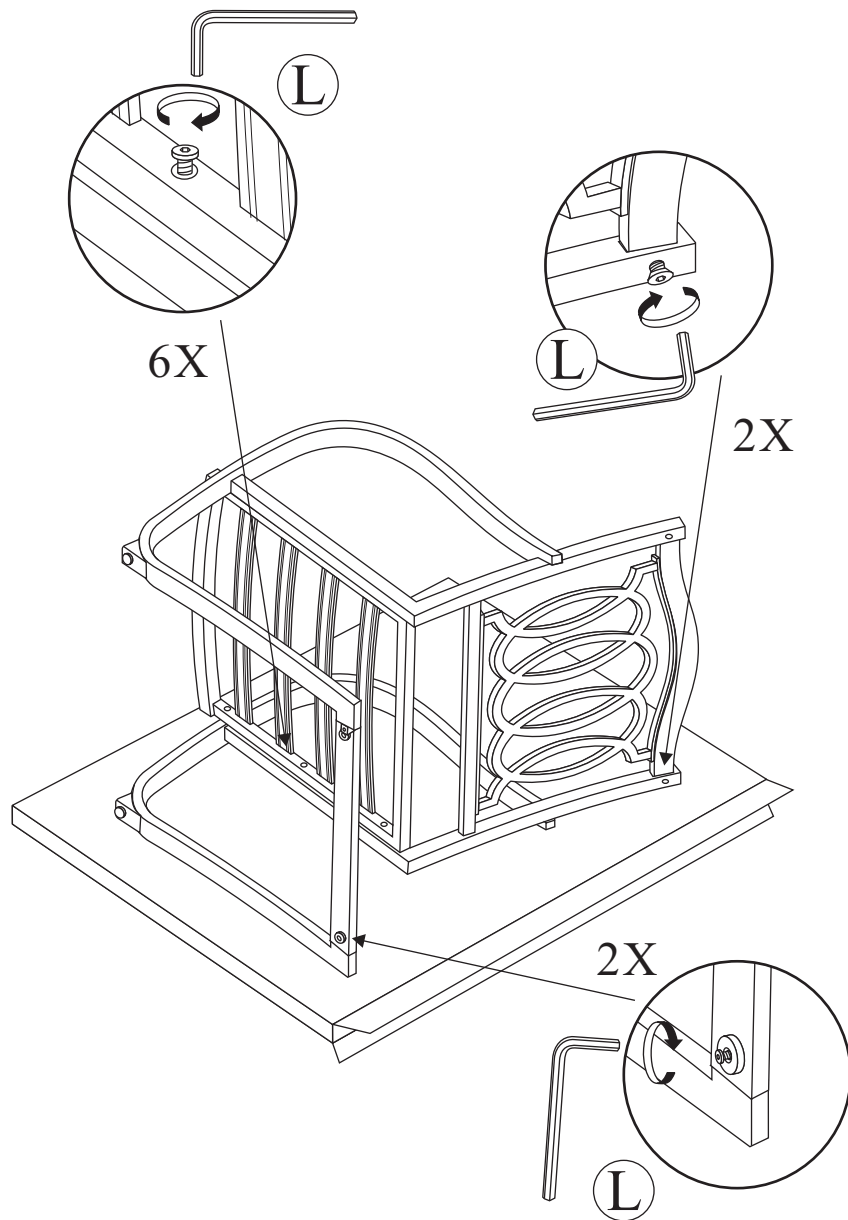



6

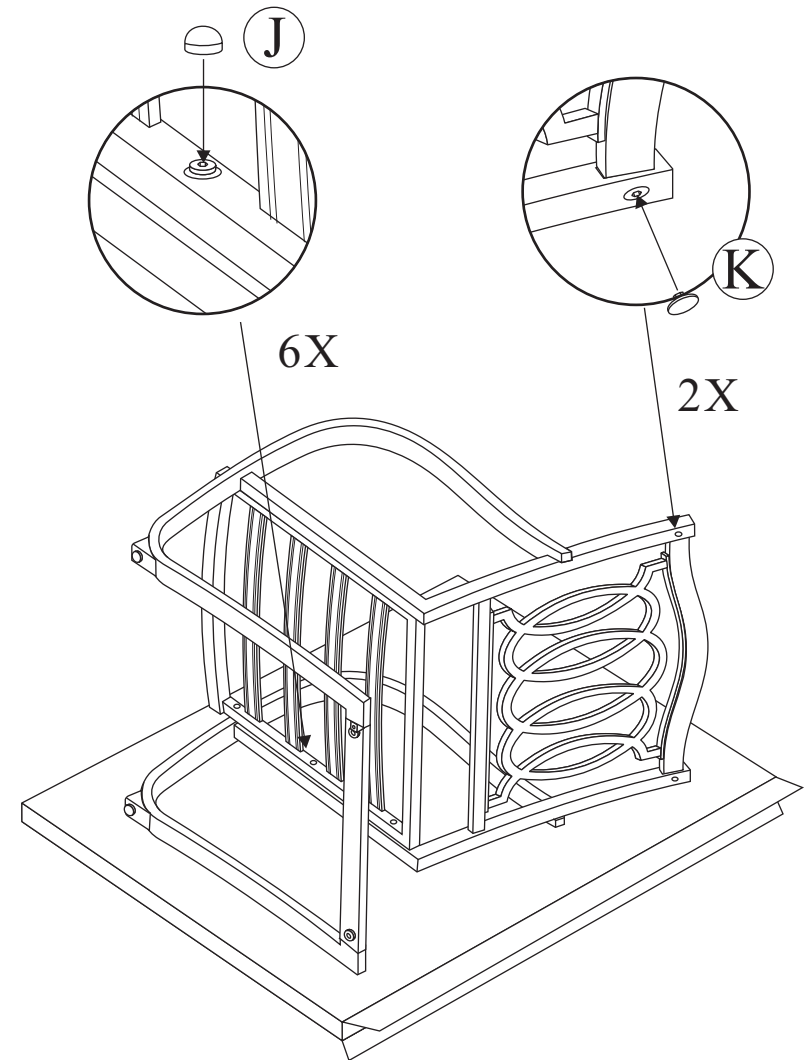




7

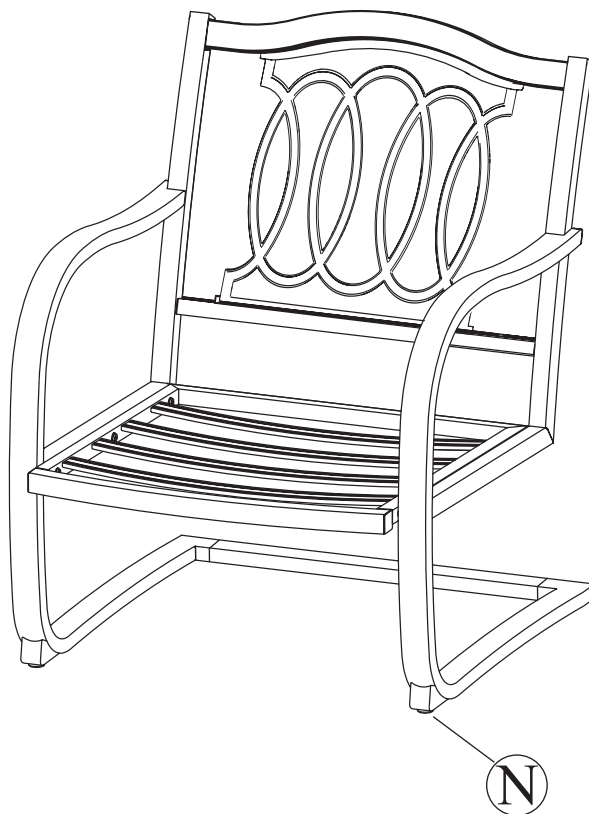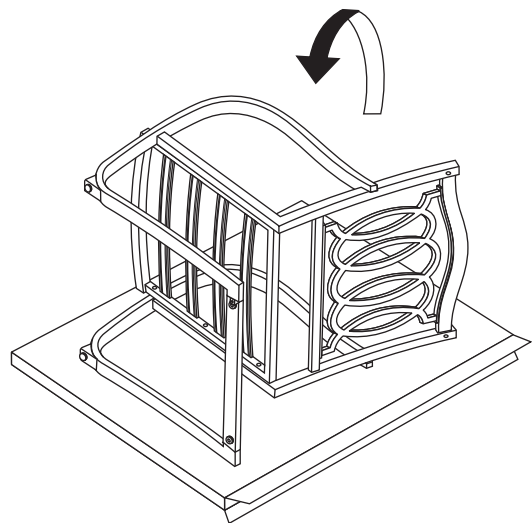

8

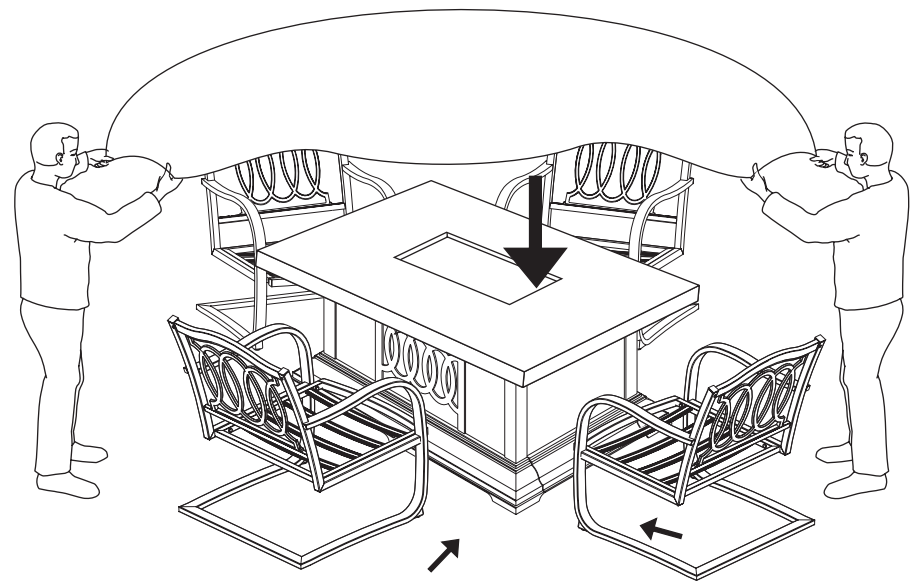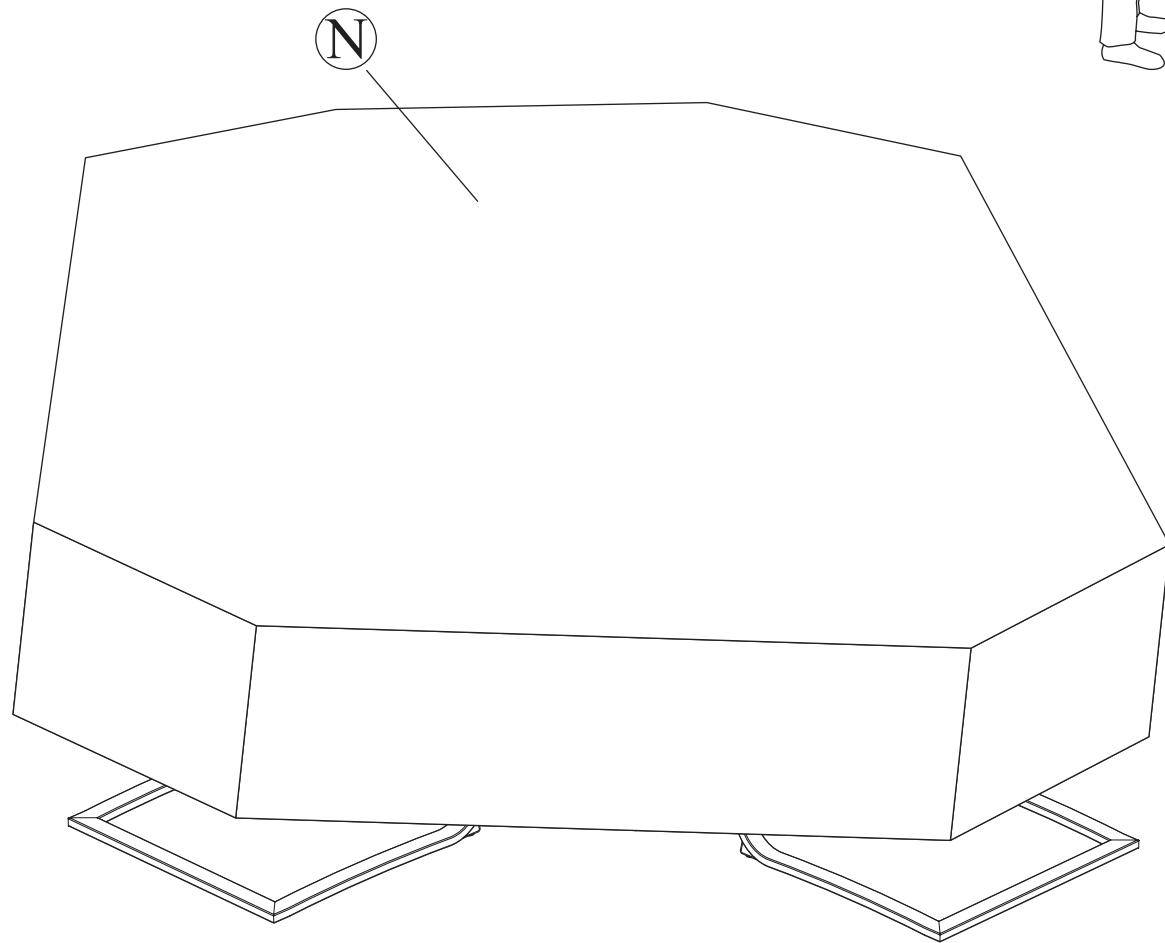


9

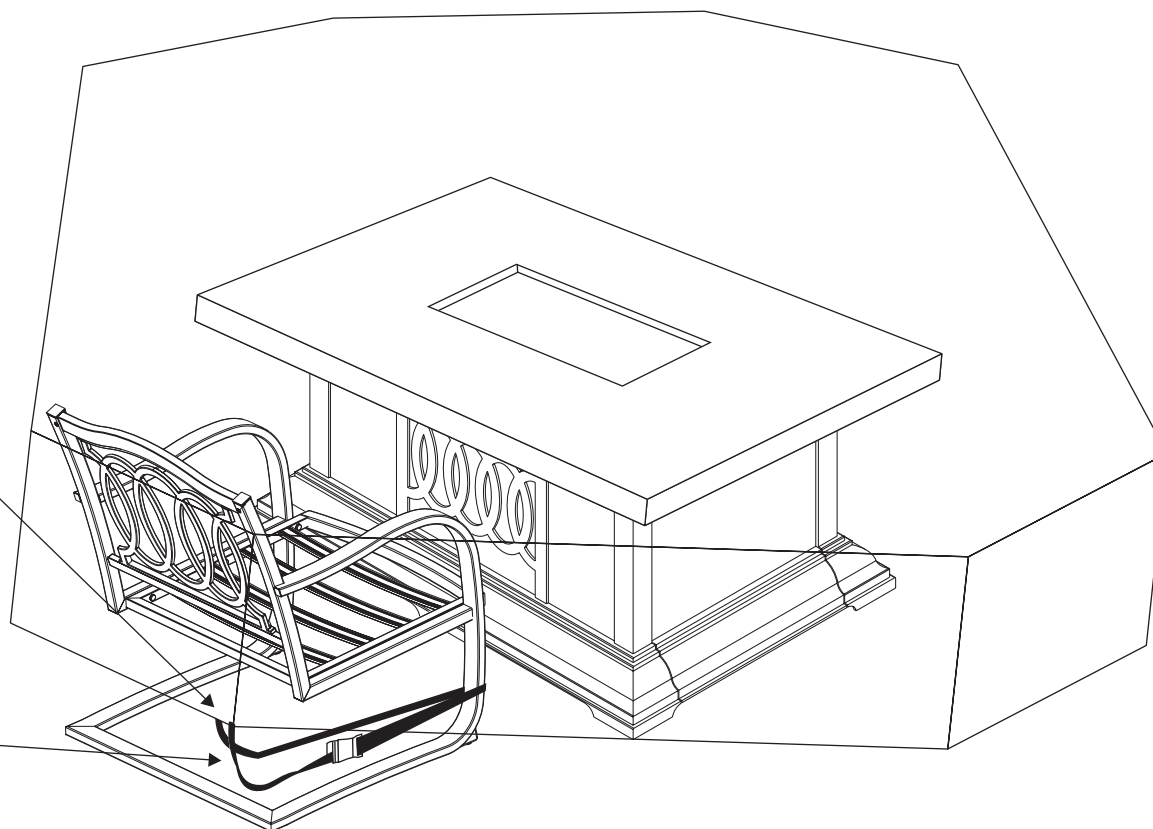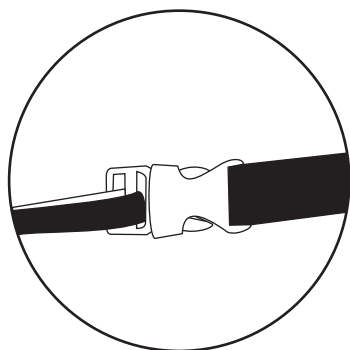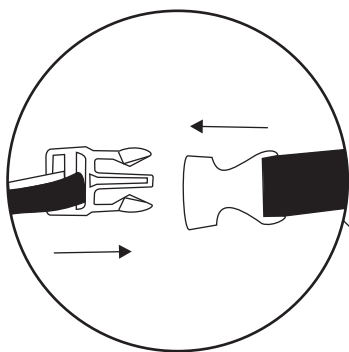

If you have any questions, please call our Customer Service Center in the US and Canada at 1-888-383-1932, 9:00am - 5:00pm Monday - Friday, EST. English and French, or you may email customerservice@agio-usa.com, United Kingdom at 0-800-092-1653.

KIRKLAND SIGNATURE™ 5 PIECE FIREPLACE SEATING GROUP
ITM./ART. 966646
ASSEMBLY INSTRUCTIONS
RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY BEFORE ASSEMBLY

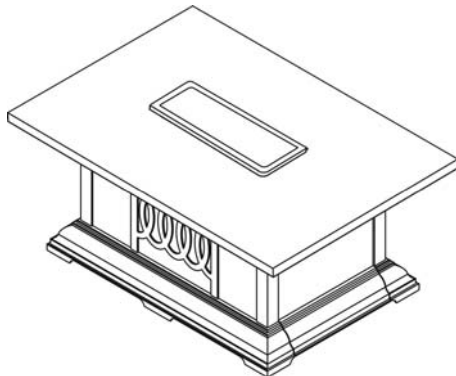

CSA Model 98300

DRF02200

Installer: Leave these instructions with consumer.

Consumer: Keep these instructions for future reference.

WARNING: Chemicals known to the State of California to cause cancer and birth defects or other reproductive harm are created by the combustion of propane.



DANGER

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.



WARNING:

Improper installation, adjustment alteration, service or maintenance can cause injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.



WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING: For Outdoor Use Only

FOR USE WITH 20LB (9KG) PROPANE CYLINDER WITH TYPE 1 CONNECTION OR FOR USE WITH NATURAL GAS AFTER CONVERSION KIT IS INSTALLED (MUST BE PROFESSIONALLY INSTALLED) ALSO THE LP REGULATOR MUST BE SUPPLIED BY THE MANUFACTURER.



DANGER

CARBON MONOXIDE HAZARD



This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.

WARNING:

USE FACTORY APPROVED REPLACEMENT PARTS AND ACCESSORIES ONLY. USE OF UNAPPROVED PART OR ACCESSORIES CAN VOID THE WARRANTY ON THIS PRODUCT AND RESULT IN A HAZARDOUS CONDITION. PLEASE CONTACT US FOR INFORMATION REGARDING REPLACEMENT HOSES, THERMOCOUPLES, ELECTRODES, IGNITION MODULES, FIRE ICE, LOGS, FIRE ICE, ETC.



Questions, Problems, Missing Parts? Before returning to your retailer, call our customer service department in the US and Canada at 1-888-383-1932, 9:00am - 5:00pm Monday – Friday, EST. English and French, or you may email customerservice@agio-usa.com, United Kingdom at 0-800-092-1653.

TABLE OF CONTENTS

Important Safety Information	3
Important Information About Propane	4
Specification	4
Parts Identification List	5-6
Installation	6-7
Natural Gas Conversion	8
Batteries	9
Lighting Instructions	9
Burner cover assembly	10
Maintenance	10
Troubleshooting Guide	11
Warranty	12-13

For additional online video support on troubleshooting and set up, please feel free to visit our website at:

www.agio-usa.com/support/firepits

IMPORTANT SAFETY INFORMATION

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54; International Fuel Gas Code; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, B149.2, as applicable.

The appliance and its appliance main gas valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5kPa).

The appliance must be isolated from the gas supply piping system by closing its equipment shutoff valve during any pressure testing of the gas supply system at test pressure equal to or less than 1/2 psi (3.5kPa).

The appliance area must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

Children and adults should be alerted to the hazards of high surface temperatures and kept at a safe distance to avoid burns or clothing ignition.

Young children should be carefully supervised when they are anywhere near the appliance.

Clothing or other flammable material should not be hung from the appliance, or placed on or near the appliance.

Any screen or guard removed for servicing an appliance shall be replaced prior to operating the appliance.

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning may be required as necessary. It is imperative that the control compartments, burners and circulating air passageways of the appliance be kept clean.

Do NOT burn solid fuels in this gas fireplace.

CAUTION: The propane gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 in / 2.74 kPa water column.

This outdoor gas appliance is not intended to be installed in or on recreational vehicles and/or boats.

Before each use of this gas appliance, open the LP (Liquid Propane) Tank Drawer and inspect the LP Hose. If there is evidence of excessive abrasion or wear, or the hose is cut, it must be replaced prior to the gas appliance being put into operation. Use only the replacement hose assembly specified in this manual. Inspect the burner before each use of the appliance. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only the burner listed in these instructions. Keep the fuel supply hose away from any heated surfaces.

IMPORTANT SAFETY INFORMATION ABOUT PROPANE (LP) GAS

An LP-gas cylinder for use with this appliance must have a capacity of 20 lbs. / 9kgs and must be equipped with a Type 1 connector and an OPD (overfill protection device). Figure 1

The LP-gas supply cylinder to be used must be constructed and marked in accordance with the specification for LP-gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, *CAN/CSA-B339, Cylinder, Sphere and Tubes for the Transportation of Dangerous Goods*.

- The cylinder supply system must be arranged for vapor withdrawal.
- The cylinder used must include a collar to protect the cylinder valve.
- This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed space.
- When this appliance is not in use, the gas must be turned off at the supply cylinder.
- Storage of this appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.
- Cylinders must be stored outdoors in a well-ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed areas.

CSA (Canadian Standards Association) certified to ANSI Z21.97•CSA 2.41-2012
“Outdoor Decorative Gas Appliances”

The gas hose is routed through a “U” bolt to prevent the hose from coming in contact with the burner. DO NOT remove the hose from the “U” bolt. See Figure 2.

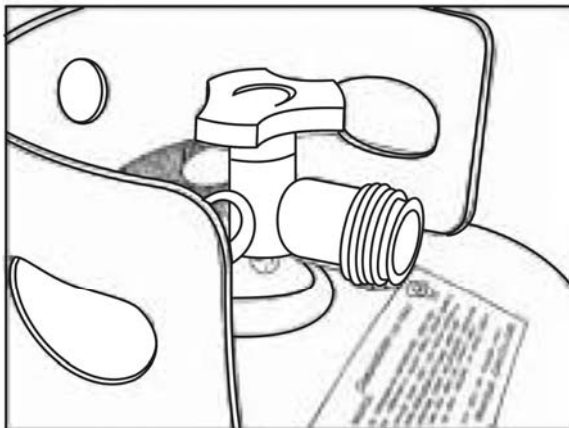


Figure 1












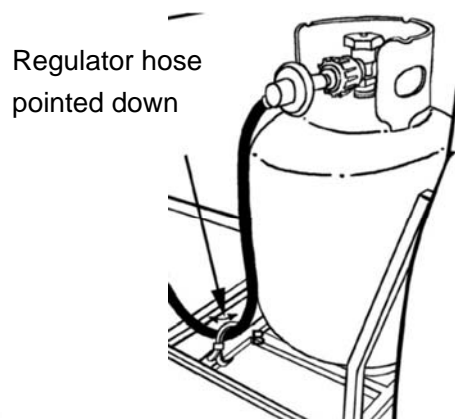








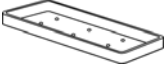




Figure 2

SPECIFICATIONS

INPUT	30,000 Btu/hr	20,000 Btu/hr Low fire
Propane Regulator Pressure	11 in / 2.74 kPa water column	
Natural Gas Minimum Inlet Pressure	7 in / 1.74 kPa water column	
Clearances to combustibles surfaces	Sides 24 in / 60.96 cm	Top: 72 in / 182.88 cm

PARTS IDENTIFICATION LIST

	PART	DESCRIPTION	PART#	QTY
A		CONTROL KNOB	FP0245	1
B		GAS VALVE	FP0307	1
C		THERMOCOUPLE	FP0004	1
D		LP REGULATOR HOSE	FP0308	1
E		ELECTRODE	FP0003	1
F		GAS TUBE	FP0309	1
G		ORIFICE ELBOW	FP0310	1
H		IGNITION MODULE	FP0006	1
I		ORIFICE BRACKET	FP0311	1
J		PROPANE ORIFICE	FP0312	1
K		NATURAL GAS ORIFICE	FP0313	1
L		LP TANK RETAINING KNOB	FP0585	2
M		FIRE ICE SET	FP1078	1
N		ADJUSTABLE FOOT CAPS	FC0553	4
O		BOLTS	HW0036	4
P		WASHERS	HW0103	4
Q		HEX BOLT DRIVER	HW0252	1
R		FIREPIT TABLETOP	FP1085	1
S		FIREPIT BASE	FP1086	1
T		FIREPAN/BURNER ASSEMBLY	FP1087	1
U		BURNER COVER	FP1088	1
V		"AAA" BATTERY(1.5V)	HW0705	1

INSTALLATION

1. Carefully unpack all items from the box. Place the base in the final position. There must be a minimum of 24 in / 60.9 cm of clearance from the side of the table top to any combustible walls.
2. Place the tabletop on the base. Secure the tabletop to the firepit base using the bolts and washers that are provided. See Figure 3 and Figure 4.

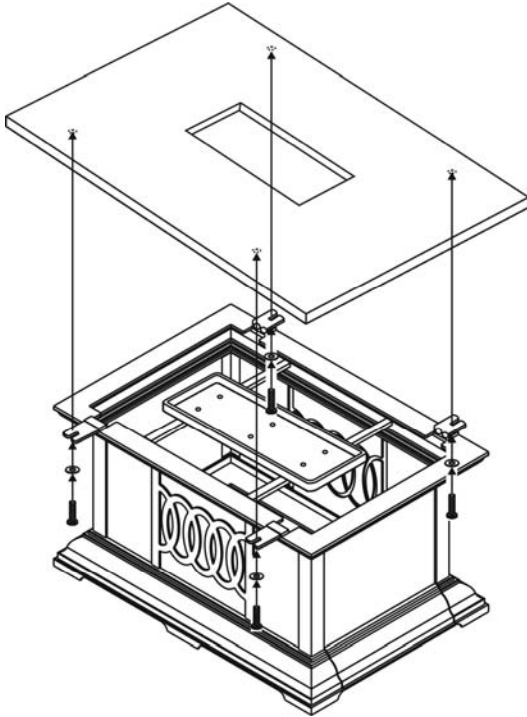


Figure 3


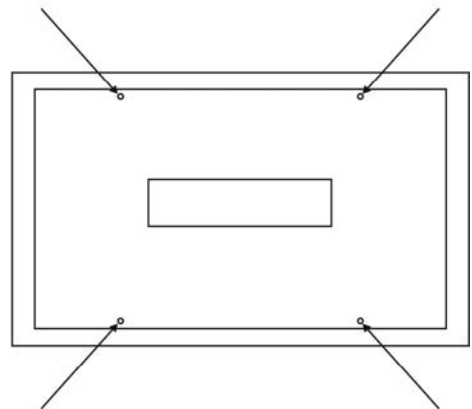


Figure 4

3. Pour the fire ice into the burner pan completely covering the burner. See Figure 5.

BURNER PAN

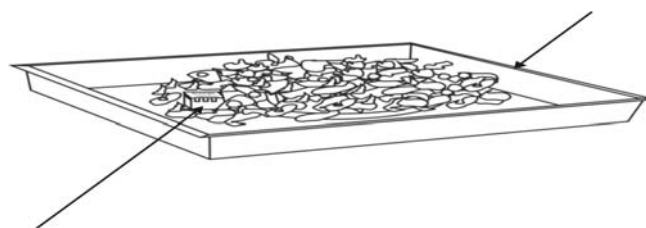

IGNITION WELL

Figure 5

4. Remove the cardboard cover from the ignition well as shown in Figure 6.

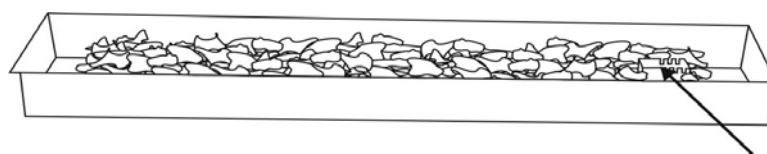


Figure 6

CARDBOARD COVER

5. Slide the tank drawer out and place the LP tank in the drawer. Connect the regulator as shown in Figure 7. Screw the black handle clock-wise to tighten. Turn the handle counter clock-wise to remove. The hose must point down. Check that the valve is turned all the way clockwise to the "OFF" position. Open the tank valve. Apply a solution of soapy water to the tank-regulator connection and to the valve-hose connection to check for leaks. If soap bubbles continue to form, the connection has a leak. If a leak is found, close the tank valve and tighten all connections.

NEVER USE A FLAME TO CHECK FOR LEAKS.

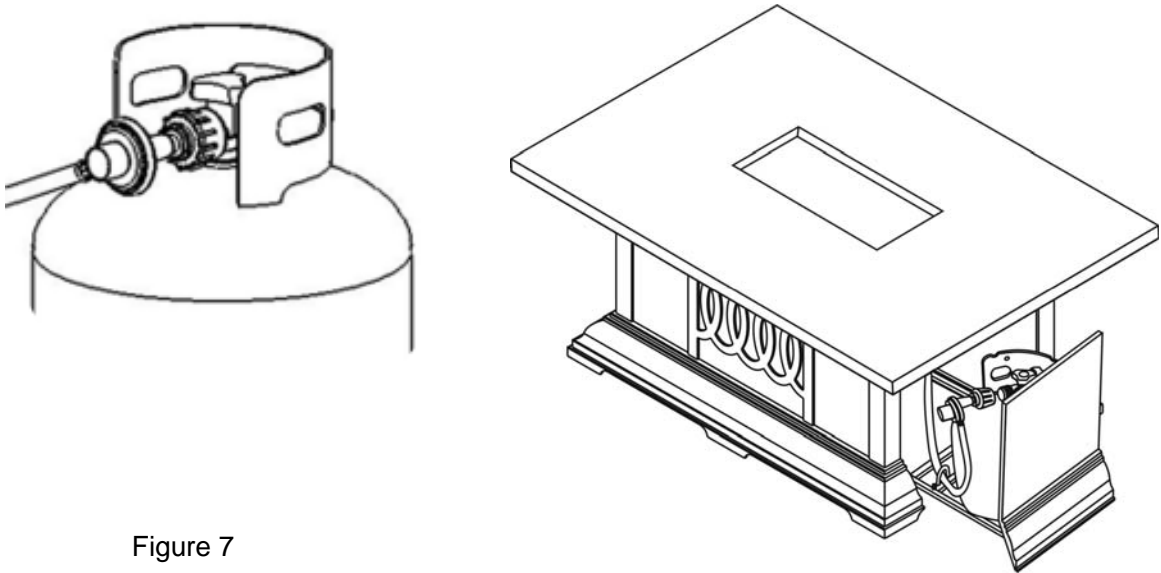


Figure 7

6. Tighten threaded knobs (L) found on tank tray (Figure 8) so that the LP tank cannot move from side to side. Do not remove plastic cap from end of threaded section.

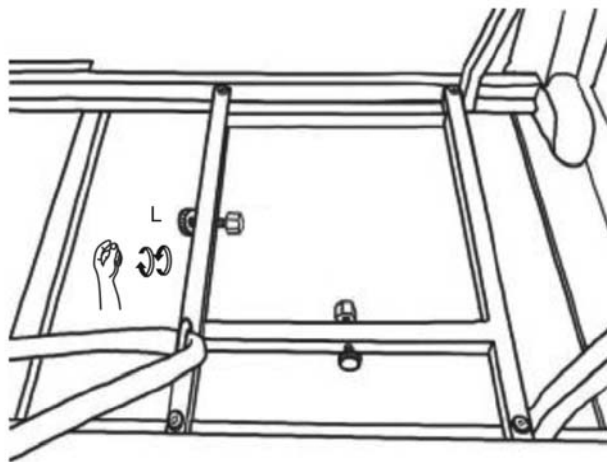


Figure 8



NATURAL GAS CONVERSION



Natural gas conversion must be performed only by your natural gas provider or service company.

1. Disconnect the regulator hose from the gas valve. See Figure 9.

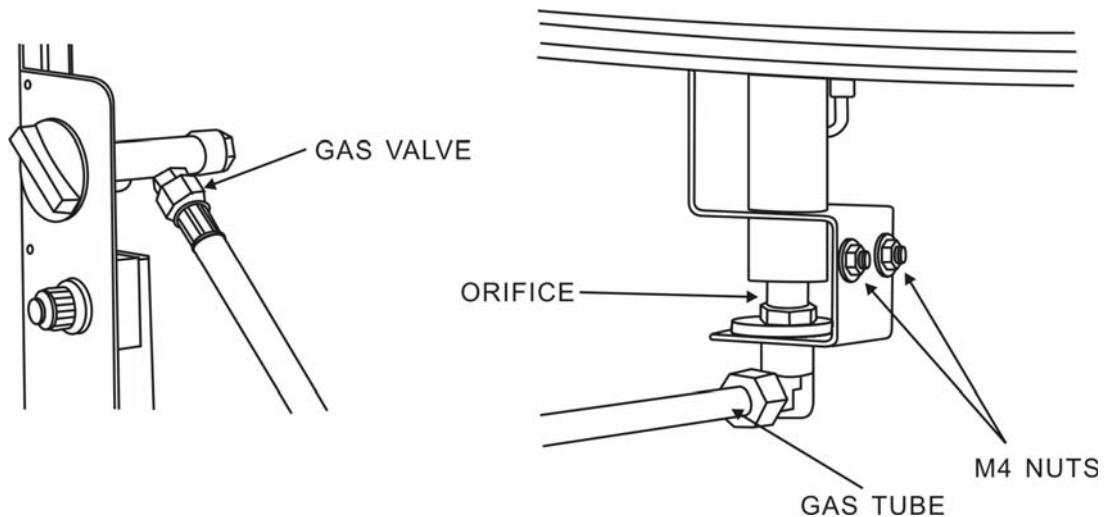


Figure 9

2. Disconnect the gas tube from the orifice elbow. Remove the two M4 nuts and remove the orifice holder. Replace the propane orifice with the natural gas orifice from the kit and reinstall the orifice holder. Apply a solution of soapy water to all connections to check for leaks. If soap bubbles continue to form, the connection has a leak. If a leak is found, close the main valve and tighten all connections. **NEVER USE A FLAME TO CHECK FOR LEAKS.**
3. Stick the conversion label on the rating plate as shown in Figure 10.

Metal Rating Plate

Serial Number _____	Model Number: <u>98300</u>
CAUTION: The gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 in water column (2.74 kPa). The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use.	
<div style="border: 1px solid black; padding: 5px;"><p>This appliance has been converted to use Natural Gas. Input 30,000 Btu/hr. Max Gas Supply Pressure 7 inch water column(1.74 kPa) Min Gas Supply Pressure 5 inch water column (1.24 kPa)</p></div>	
FOR OUTDOOR USE ONLY. If stored indoors, detach and leave cylinder outdoors.	

Figure 10

CONVERSION LABEL

BATTERIES

Make sure the control knob is in the "OFF" position. Unscrew the push button cap on the ignition module located on the control panel to access the battery compartment. The ignition module requires one Alkaline AAA size battery (1.5V). The negative (-) end goes in first. See Figure 11. Dispose of battery safely. Battery may explode or leak if charged or disposed of in fire. Make sure of the polarity. The battery is mercury and cadmium free.

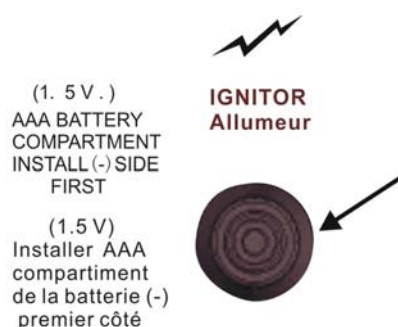


Figure 11

LIGHTING INSTRUCTIONS

Warning: If these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

1. Open the tank drawer and find the control panel on the left. Make sure the control knob is in the "OFF" position. See Figure 12. Open the tank valve all the way.
2. Push in the igniter button. You will hear a slight clicking sound. With the igniter button pushed in, push and turn the control knob to the "ON" position. The fire should light within a few seconds. Once the flame is lit, release the igniter button and continue to hold the control knob in for 10 to 15 seconds. Release the control knob. The control knob should pop back out and the fire remain lit. Note: If the fire does not light, turn the knob to the "OFF" position and wait five (5) minutes before trying again.

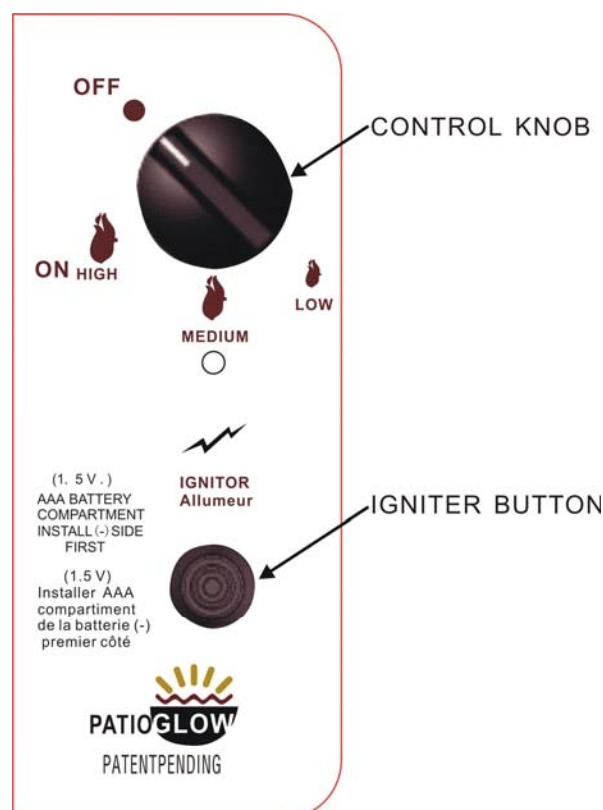


Figure 12

3. To turn down the flame, push the control knob in slightly and turn to Medium (medium flame), or Low (small flame).
4. To turn off the fire pit, turn the control knob to the "OFF" position and turn off the tank valve.

BURNER COVER ASSEMBLY

1. Place the burner cover on the table top as shown in Figure13.

WARNING: BEFORE PLACING THE BURNER COVER ON, MAKE SURE THE FIREPIT HAS BEEN SHUT OFF AND THE BURNER HAS COMPLETELY COOLED DOWN.

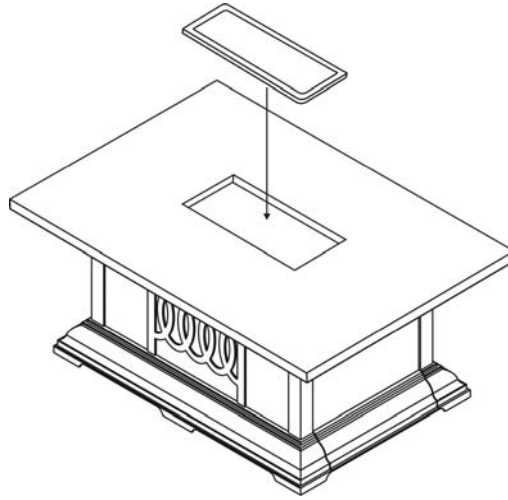


Figure 13

MAINTENANCE

The flames should look like those in Figure 14. To clean the burner, use a soft brush after the burner has cooled completely. Never use a vacuum cleaner on the burner. It is recommended to store the fire pit indoors during winter if it will be subjected to freezing temperatures. The LP cylinder must be disconnected and removed from the appliance before the appliance can be stored indoors.



Figure 14

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	REMEDY
Burner won't light	No Propane Gas at Burner	Check that gas tank valve is open. Turn control knob to "ON" and push control knob in. Make sure tank has propane gas.
	No Spark at Electrode	Check that AAA battery is installed with negative (-) end first and has a charge. Check that the wire is connected to the ignition module. Check that the electrode is not cracked or broken.
Burner won't stay lit after lighting	Thermocouple not in flame	Check that the tip of the thermocouple is even with the top of the ignition well. Remove any fire ice from the ignition well.
	Thermocouple connection at the main control valve is loose	Tighten the thermocouple nut at the back of the valve.
	No Fire Ice on Burner	Cover the burner with fire ice per the instructions

One Year Limited Warranty for Firepit

What is covered under this warranty?

Subject to the terms and conditions set forth below, fireplaces are warranted against defects in material and workmanship for a period of one year.

If you have questions regarding care and maintenance of the item(s) you have purchased, please see the accompanying care and maintenance guide or visit our website at www.agio-usa.com. If you have further questions, please call our customer service center in the US and Canada at 1-888-383-1932.

How Do I Obtain Warranty Service?

To obtain warranty service, you must contact our customer service center within the relevant warranty period and provide us with a copy of your dated register receipt as proof of the purchase date. We reserve the right to request photographs and/or return of the defective item(s) and/or such other evidence relating to any claim as we shall reasonably require. Warranty claims for missing or damaged items must be submitted within 90 days of purchase. If you purchased our product through any of our dotcom retailers and receive a damaged item, please contact the retailer to report shipping damage. Please call our customer service center in the US and Canada at 1-888-383-1932 for additional warranty claim details and procedures. You may also contact us by emailing customerservice@va-cs.com. Hours of operation are Monday-Friday 9:00 AM – 5:00 PM Eastern Standard Time.

What are the Limitations and Exclusions of this Warranty?

Warranty Limitations: This warranty is subject to the limitations set forth above. In addition, this warranty is made to the original purchaser only, and is effective only if items are purchased from one of our authorized dealers. This warranty is not transferable. For warranty replacements based on warranty claims submitted within one year of purchase, we will pay shipping and handling charges within continental North America. After the first year, shipping and handling charges are your responsibility. We will not be responsible for charges associated with shipments outside continental North America at any time or for any reason.

This warranty is given and relates to product sold to your retailer by an Agio International Company, Limited; Dimension Industries Company, Limited; or Woven Design Company, Limited. It may also relate to products otherwise sold under the Agio brand. Warranty services are administered by Point of Impact, Inc., an independent contractor, which is not responsible for the warranty obligations set forth herein.

Warranty exclusions: This warranty is subject to the exclusions set forth above. In addition, the following are excluded from coverage under this warranty: any item used for commercial, contract or any other non-residential purpose; display models or items purchased “as is”; freight damage; items subject to misuse, abuse, neglect or lack of proper care or maintenance (including without limitation as provided in any “care and maintenance

guide” or similar information we provide); normal wear and tear; damage caused by acts of nature, acts of force majeure, vandalism, fire or other casualty, or improper assembly; hardware against corrosion or rusting; purchased or replacement parts; and all plastic parts. Also excluded are loss of use or time; inconvenience; money; travel; packaging or incidental, special or consequential damages of any kind. Replacement of defective items or parts as provided herein, or prorated refund of your purchase price, at our sole discretion, shall constitute your sole and exclusive remedy for items which are not as warranted. In no event shall our responsibility exceed the purchase price of the item found to be other than as warranted. This warranty is the exclusive statement of your rights with respect to items you have purchased and supersedes any other express warranty or statement, written or oral, made in connection with the purchase and sale of such items. The term “item” when used herein in the singular refers to the specific piece found to be defective, and not to the entire set of which the item is a part.

Some states do not allow exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Every Kirkland Signature Product is guaranteed to meet or exceed the quality standards of the leading national brands. If you are not completely satisfied, your money will be refunded by Costco.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.